 


**4051 plus**

# **Programmer's Manual**

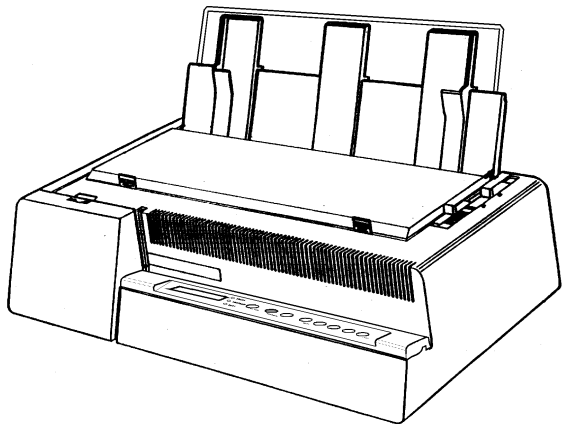

**CompuPrint** 

---



# A. Commands

This appendix provides information about the commands supported by your printer. The commands are organized by function groups. Each command has both a brief and a detailed description.

<b>Introduction .....</b>	<b>2</b>
General Overview .....	2
Command Summary in Alphabetical Order.....	2
<b>EPSON/IBM Mode .....</b>	<b>6</b>
Print and Line Feed Execution .....	6
Format Control.....	8
Print Mode.....	22
Character Set .....	35
Download Character .....	40
Bit-Image.....	45
Data Input Control .....	49
Miscellaneous.....	52
<b>COMPUPRINT Mode .....</b>	<b>54</b>
Format Control.....	54
Automatic Sheet Feeder .....	56
Native Character Set .....	57
Bar Codes .....	59
Miscellaneous .....	65

# Introduction

## General Overview

This appendix provides information about the commands supported by your printer. The commands are organized by function groups. Each command has both a brief and a detailed description.

Each command has the following structure:

- Name and function description. Information about protocol (IBM Proprinter XLIII and EPSON FX Series)
- The hexadecimal and decimal codes for the command: *n* represents variable parameters of the command. The functions of these parameters are explained in its corresponding command description.

## Command Summary in Alphabetical Order

<b>//n//</b>	ASF and Bin selection. (Compuprint)	55
<b>BEL</b>	Buzzer. (EPSON)	51
<b>BS</b>	Print and space back one position. (IBM, EPSON)	51
<b>CAN</b>	Cancels line. (EPSON)	48
<b>CAN</b>	Cancels data. (IBM)	48
<b>CR</b>	Prints all received data and the column counter is set to the left margin. (IBM, EPSON)	6
<b>DC1</b>	Selects printer. (IBM)	49
<b>DC1</b>	Selects printer. (EPSON)	49
<b>DC2</b>	Sets 10 cpi printing. (IBM)	22
<b>DC2</b>	Cancels compressed printing. (EPSON)	22
<b>DC3</b>	Deselects printer. (EPSON)	49
<b>DC4</b>	Cancels double width printing. (IBM, EPSON)	23
<b>DC4 DC4 ESC !</b>	Bar Code Selection.	58
<b>DC4 DC4 ESC (GS</b>	Prints bar code symbols (Compuprint)	63
<b>DC4 DC4 ESC @</b>	Re-initializes the printer. (Compuprint)	65
<b>DC4 DC4 ESC 3 1</b>	Sets vertical spacing 12 lines/30 mm. (Compuprint)	53
<b>DC4 DC4 ESC 3 3</b>	Sets vertical spacing to 3 lines/30 mm. (Compuprint)	53
<b>DC4 DC4 ESC 3 4</b>	Sets vertical spacing 4 lines/30 mm. (Compuprint)	53
<b>DC4 DC4 ESC 3 6</b>	Sets vertical spacing 6 lines/30 mm. (Compuprint)	54
<b>DC4 DC4 ESC 3 8</b>	Sets vertical spacing 8 lines/30 mm. (Compuprint)	54
<b>DC4 DC4 ESC A</b>	Sets the horizontal spacing to 15, 17, 20 CPI. (Compuprint)	54
<b>DC4 DC4 ESC g</b>	Selects LQ fonts (Compuprint).	56

<b>DC4 DC4 ESC S</b>	Selects character set ISO Character Sets or Code Pages. (Compuprint)	56
<b>DC4 DC4 ESC Y</b>	Selects emulation. (Compuprint)	65
<b>ESC -</b>	Sets or cancels underlined printing. (IBM, EPSON)	23
<b>ESC !</b>	Mater Select. (EPSON)	23
<b>ESC #</b>	Cancels MSB control. (EPSON)	49
<b>ESC \$</b>	Sets the absolute printing position. (EPSON)	8
<b>ESC %</b>	Selects user-defined character set. (EPSON)	39
<b>ESC &amp;</b>	Defines user-defined characters. (EPSON)	39
<b>ESC ( -</b>	Sets score line. (EPSON)	24
<b>ESC *</b>	Sets dot graphics mode. (EPSON)	44
<b>ESC / m</b>	Selects the Vertical Format Unit (VFU) channel. (EPSON)	10
<b>ESC :</b>	Sets 12 CPI. (IBM)	24
<b>ESC :</b>	Copies characters from ROM to RAM. (EPSON)	40
<b>ESC ?</b>	Reassigns dot graphics mode. (EPSON)	45
<b>ESC @</b>	Initializes the printer. (EPSON)	51
<b>ESC [ T</b>	Selects a Code page.	35
<b>ESC [ @</b>	Sets double high printing and double line feed. (IBM)	25
<b>ESC \</b>	Sets vertical units. (IBM)	9
<b>ESC \</b>	Sets the relative horizontal print position. (EPSON)	9
<b>ESC \</b>	Prints characters from all characters table. (IBM)	35
<b>ESC ]</b>	Sets a reverse line feed. (IBM)	6
<b>ESC ^</b>	Prints a single character from the all characters table. (IBM)	36
<b>ESC _</b>	Sets or cancels overscore printing. (IBM mode)	26
<b>ESC &lt;</b>	Prints characters for one line from left to right. (EPSON)	25
<b>ESC =</b>	Defines downloaded characters. (IBM)	41
<b>ESC =</b>	Sets MSB to 0. (EPSON)	50
<b>ESC &gt;</b>	Sets MSB to 1. (EPSON)	50
<b>ESC 0</b>	Selects 1/8-inch line spacing. (IBM, EPSON)	11
<b>ESC 1</b>	Selects 7/72-inch line spacing. (IBM)	11
<b>ESC 2</b>	Selects 1/6-inch line spacing. (EPSON)	11
<b>ESC 2</b>	Enables the line spacing set by ESC A command. (IBM)	11
<b>ESC 3</b>	Sets n/180-inch line spacing. (EPSON)	12
<b>ESC 3</b>	Sets graphics line spacing at n/216 inch. (IBM)	12
<b>ESC 4</b>	Sets top of form (first printable line). (IBM)	12
<b>ESC 4</b>	Sets italics printing mode. (EPSON)	26
<b>ESC 5</b>	Sets an automatic line feed after a carriage return. (IBM)	7
<b>ESC 5</b>	Cancels italics printing. (EPSON)	26
<b>ESC 6</b>	Enables Upper Control Codes. (EPSON)	36
<b>ESC 7</b>	Selects the Character Set 1. (IBM)	36
<b>ESC 7</b>	Enables Upper Control Codes. (EPSON)	37
<b>ESC A</b>	Sets text line spacing at n/60 inch. (EPSON)	13
<b>ESC A</b>	Sets text line spacing at n/72 inch. (IBM)	13
<b>ESC a</b>	Sets Letter Quality justification printing. (EPSON)	27
<b>ESC B</b>	Sets vertical tabs. (IBM, EPSON)	13
<b>ESC b</b>	Sets vertical tabs in VFU channels. (EPSON)	14
<b>ESC C</b>	Sets form length to <i>n</i> lines. (IBM, EPSON)	14
<b>ESC C 0</b>	Sets form length to <i>n</i> inches. (IBM, EPSON)	14

<b>ESC D</b>	Sets horizontal tabs. (IBM, EPSON)	15
<b>ESC d</b>	Spaces forwards relative dot position. (IBM)	15
<b>ESC e</b>	Spaces backwards relative dot position. (IBM)	16
<b>ESC E</b>	Sets emphasized printing. (IBM, EPSON)	27
<b>ESC EM</b>	Ejects cut sheets and selects or deselects the Automatic Sheet Feeder. (EPSON)	55
<b>ESC F</b>	Cancels emphasized printing. (IBM, EPSON)	27
<b>ESC G</b>	Sets double strike printing. (IBM, EPSON)	28
<b>ESC g</b>	Sets 15 CPI. (EPSON)	28
<b>ESC H</b>	Cancels double strike printing. (IBM, EPSON)	28
<b>ESC I</b>	Selects printing type for resident and DLL characters. (IBM)	28
<b>ESC J</b>	Advances paper $n/216$ inch. (EPSON)	7
<b>ESC j</b>	Feeds paper $n/216$ inches in reverse direction. (EPSON)	7
<b>ESC j</b>	Stops printing. (IBM)	52
<b>ESC k</b>	Selects fonts. (EPSON)	37
<b>ESC K</b>	Normal density dot graphics printing (60 dpi). (IBM, EPSON)	45
<b>ESC I</b>	Sets left margin (10 cpi). (EPSON)	16
<b>ESC L</b>	Double density dot graphics printing (120 dpi). (IBM, EPSON)	46
<b>ESC M</b>	Selects 12 or 20 cpi. (EPSON)	29
<b>ESC N</b>	Sets the skipover perforation to $n$ lines. (IBM, EPSON)	17
<b>ESC O</b>	Disables the skipover perforation. (IBM, EPSON)	18
<b>ESC P</b>	Selects 10 or 17 cpi. (EPSON)	29
<b>ESC P</b>	Sets or cancels proportional printing. (IBM)	30
<b>ESC p</b>	Sets or cancels proportional printing. (EPSON)	30
<b>ESC Q</b>	Sets the right margin (10 cpi). (EPSON)	18
<b>ESC Q</b>	Deselects Printer. (IBM)	50
<b>ESC R</b>	Sets all tabs to power-on settings. (IBM)	19
<b>ESC R</b>	Selects an international character set. (EPSON)	38
<b>ESC S</b>	Sets subscript or superscript printing. (IBM, EPSON)	31
<b>ESC s</b>	Sets and resets Quiet printing. (EPSON)	32
<b>ESC SI</b>	Selects condensed mode. (IBM, EPSON)	31
<b>ESC SO</b>	Sets double width printing (one line). (IBM, EPSON)	32
<b>ESC SP</b>	Sets intercharacter space. (EPSON)	19
<b>ESC T</b>	Cancels subscript or superscript printing. (IBM, EPSON)	32
<b>ESC t</b>	Selects characters table. (EPSON)	38
<b>ESC U</b>	Sets printing direction. (IBM, EPSON)	52
<b>ESC W</b>	Sets or cancels double width printing. (IBM, EPSON)	33
<b>ESC w</b>	Sets or cancels double height printing. (EPSON)	33
<b>ESC X</b>	Sets left and right margins. (IBM)	20
<b>ESC x</b>	Selects Letter Quality or Draft printing. (EPSON)	34
<b>ESC y</b>	Selects yellow ribbon band. (IBM)	34
<b>ESC Y</b>	Double density dot graphics printing at double-speed graphics (120 virtual dpi). (IBM, EPSON)	47
<b>ESC Z</b>	Quadruple density dot graphics printing (240 virtual dpi). (IBM, EPSON)	47
<b>FF</b>	Advances paper to the top of the next page. (IBM, EPSON)	20

<b>HT</b>	Horizontal Tab. (IBM, EPSON)	21
<b>LF</b>	Line Feed. (IBM, EPSON)	8
<b>SI</b>	Sets condensed printing. (IBM, EPSON)	34
<b>SO</b>	Sets double width printing (one line). (IBM, EPSON)	35
<b>VT</b>	Vertical Tab. (IBM, EPSON)	21

## EPSON/IBM Mode

This printer according to the IBM Proprinter XLIII and EPSON FX Series emulations supports the following printer commands.

### Print and Line Feed Execution

---

#### CR

**Prints all received data and the column counter is set to the left margin. (IBM, EPSON)**

ASCII Code	CR
Hexadecimal Value	0D
Decimal Value	13

The print head then moves logically to the left margin position. The column counter is set to the left margin value and a line feed is inserted automatically after the carriage return (see the automatic carriage return function in the printer setup). When the printer is in parallel connection and in EPSON mode, a line feed is inserted automatically after a carriage return if AUTO LF HOST selection is set in the Configuration Setup procedure and the AUTOFEEDXT signal is low. This code resets the double width printing set by SO code.

#### ESC ]

**Sets a reverse line feed. (IBM)**

ASCII Code	ESC ]
Hexadecimal Value	1B 5D
Decimal Value	27 93

This code is a terminator code; when received, it causes the current contents of the print buffer to be printed out, before reversing the paper by one line at the current vertical spacing. If no data precedes this command or if the preceding data consists of spaces, the code causes only a reverse line feed to be performed. When the line counter is equal to or less than the top of the form value, the ESC ] is ignored.

---

## ESC 5

### Sets an automatic line feed after a carriage return. (IBM)

ASCII Code           ESC 5 *n*  
 Hexadecimal Value   1B 35 *n*  
 Decimal Value        27 53 *n*

If *n* is equal to 1, this command sets an automatic line feed on receiving of a CR code. If *n* is equal to 0, this command cancels the automatic line feed.

<b>n</b>	Automatic line feed
<b>0</b>	Disabled
<b>1</b>	Enabled

---

## ESC J

### Advances paper *n*/216 inch. (EPSON)

ASCII Code           ESC J *n*  
 Hexadecimal Value   1B 4A *n*  
 Decimal Value        27 74 *n*  
 Range                1 ≤ *n* ≤ 255

This is a terminator code; it therefore causes the current contents of the print buffer to be printed out before performing a single line feed of *n*/216 inch. This command is cancelled after the line feed has been performed. The printing will restart after a line feed from the column at which the command was sent.

---

## ESC j

### Feeds paper *n*/216 inches in reverse direction. (EPSON)

ASCII Code           ESC j *n*  
 Hexadecimal Value   1B 6A *n*  
 Decimal Value        27 106 *n*

This is a terminator code; it therefore causes the current contents of the print buffer to be printed out. The paper then is moved backward *n*/216 inch. And the printing restart from the column at which the command was sent.

## LF

### Line Feed. (IBM, EPSON)

ASCII Code	LF
Hexadecimal Value	0A
Decimal Value	10

This is a terminator code; it therefore causes the current contents of the print buffer to be printed out before advancing the paper by one line at the current vertical spacing. If no data precedes the LF code, or if the preceding data consists of spaces, the code causes only a line feed.

When the line counter reaches the last line of the form (defined by software or function menu), the LF code causes a skip to the first line of the next form or ejects a cut sheet, if loaded. This code cancels the double width printing set by the SO code. In IBM mode, the column counter is set to the first column if the automatic carriage return is selected. In EPSON mode, the column is always set to the first column.

## Format Control

---

### ESC \$

#### Sets the absolute printing position. (EPSON)

ASCII Code	ESC & $n_1 n_2$
Hexadecimal Value	1B 24 $n_1 n_2$
Decimal Value	27 36 $n_1 n_2$
Range	$0 \leq n_1 \leq 255$ $0 \leq n_2 \leq 127$

This command specifies the distance from the left margin where you want to print subsequent characters. The default unit is 1/60 inch. The distance is in number of dots and must be calculated using the following formula:

Margin distance =  $n_1 + (n_2 \times 256) \times 1/60'' + (\text{left margin})$

Where  $n_2$  is equal to:

$$\text{INIT} = \frac{[(\text{horizontal position}) - (\text{left margin position})] \times \left( \frac{1}{\text{defined unit}} \right)}{256}$$

Where  $n_1$  is equal to:

$$\text{MOD} = \frac{[(\text{horizontal position}) - (\text{left margin position})] \times \left( \frac{1}{\text{defined unit}} \right)}{256}$$

If the selected position is outside the current right margin, the sequence will be ignored.

---

## ESC [ \

### Sets vertical units. (IBM)

ASCII Code	ESC [ \ $m_1 m_2 t_1 \dots t_4$
Hexadecimal Value	1B 5B 5C $m_1 m_2 t_1 \dots t_4$
Decimal Value	27 91 92 $m_1 m_2 t_1 \dots t_4$
Range	$m_1 = 4$ $m_2 = 0$ $0 \leq t_1 \leq 255$ $0 \leq t_2 \leq 255$ $t_3 = 0$ $t_4 = 180 \text{ or } 216$

This command changes the base units for the graphics line spacing commands (ESC J, ESC 3). The default value is 1/216 or 1/180 inch.

---

## ESC \

### Sets the relative horizontal print position. (EPSON)

ASCII Code	ESC \ $n_1 n_2$
Hexadecimal Value	1B 5C $n_1 n_2$
Decimal Value	27 92 $n_1 n_2$
Range	$0 \leq n_1 \leq 255$ $0 \leq n_2 \leq 127$

This command moves the horizontal print position left or right from the current position as specified by the following formula:

Horizontal position =  $(n_2 \times 256) + n_1 \times (\text{defined unit}) + (\text{current position})$

*For positive (right) movement:*

Where  $n_2$  is equal to:

$$\text{INIT} \frac{[(\text{horizontal position}) - (\text{current position})] \times \left( \frac{1}{\text{defined unit}} \right)}{256}$$

Where  $n_1$  is equal to:

$$\text{MOD} \frac{[(\text{horizontal position}) - (\text{current position})] \times \left( \frac{1}{\text{defined unit}} \right)}{256}$$

*For negative (left) movement:*

Where  $n_2$  is equal to:

$$32768\text{-INIT} \frac{[(\text{current position}) - (\text{horizontal position})] \times \left( \frac{1}{\text{defined unit}} \right)}{256}$$

Where  $n_1$  is equal to:

$$32768\text{-MOD} \frac{[(\text{current position}) - (\text{horizontal position})] \times \left( \frac{1}{\text{defined unit}} \right)}{256}$$

The default unit is 1/120 inch in Draft mode and 1/180 inch in LQ mode. If it would move the print position outside the printing area, the printer ignores this command.

---

## ESC / m

**Selects the Vertical Format Unit (VFU) channel. (EPSON)**

ASCII Code	ESC / m
Hexadecimal Value	1B 2F m
Decimal Value	27 47 m
Range	$0 \leq n \leq 7$

This command selects the vertical tab set  $m$ . The values for  $m$  specifies the number of the tab set being changed. These sets of tabs are called vertical format unit (VFU) channels.

---

**ESC 0****Selects 1/8-inch line spacing. (IBM, EPSON)**

ASCII Code	ESC 0
Hexadecimal Value	1B 30
Decimal Value	27 48

This command causes line spacing to be set to 1/8 inch. If the line spacing is changed, it does not affect previous settings for vertical tabs or page length.

---

**ESC 1****Selects 7/72-inch line spacing. (IBM)**

ASCII Code	ESC 1
Hexadecimal Value	1B 31
Decimal Value	27 49

This command causes line spacing to be set to 7/72 inch.

---

**ESC 2****Selects 1/6-inch line spacing. (EPSON)**

ASCII Code	ESC 2
Hexadecimal Value	1B 32
Decimal Value	27 50

This command causes the line spacing to be set to 1/6 inch. If the line spacing is changed, it does not affect previous settings for vertical tabs or page length.

---

**ESC 2****Enables the line spacing set by ESC A command. (IBM)**

ASCII Code	ESC 2
Hexadecimal Value	1B 32
Decimal Value	27 50

This command starts line spacing at a value that was set by ESC A..

---

**ESC 3****Sets n/180-inch line spacing. (EPSON)**

ASCII Code	ESC 3 <i>n</i>
Hexadecimal Value	1B 33 <i>n</i>
Decimal Value	27 51 <i>n</i>
Range	$0 \leq n \leq 255$

This command sets the line spacing to  $n/180$  inch. If the line spacing is changed, it does not affect previous settings for vertical tabs or page length.

---

**ESC 3****Sets graphics line spacing at  $n/216$  inch. (IBM)**

ASCII Code	ESC 3 <i>n</i>
Hexadecimal Value	1B 33 <i>n</i>
Decimal Value	27 51 <i>n</i>
Range	$0 \leq n \leq 255$

This command sets graphics line spacing at  $n$  default unit defined by the ESC [ \ command. To move exactly  $n/216$  inch,  $n$  must be an integer multiple of 3.

---

**ESC 4****Sets top of form (first printable line). (IBM)**

ASCII Code	ESC 4
Hexadecimal Value	1B 34
Decimal Value	27 52

This sequence sets the first line of the fanfold paper as the current paper position of the form.

---

## ESC A

### Sets text line spacing at $n/60$ inch. (EPSON)

ASCII Code	ESC A $n$
Hexadecimal Value	1B 41 $n$
Decimal Value	27 65 $n$
Range	$0 \leq n \leq 85$

This command changes the default line spacing to  $n/60$  inch. The new line spacing value is immediately activated.

---

## ESC A

### Sets text line spacing at $n/72$ inch. (IBM)

ASCII Code	ESC A $n$
Hexadecimal Value	1B 41 $n$
Decimal Value	27 65 $n$

This command changes the line spacing to  $n/72$  inch. The line spacing value is stored and activated only after the ESC 2 code is received.

---

## ESC B

### Sets vertical tabs. (IBM, EPSON)

ASCII Code	ESC B $n_1 \dots n_x 0$
Hexadecimal Value	1B 42 $n_1 \dots n_x 00$
Decimal Value	27 66 $n_1 \dots n_x 0$
Range	$1 \leq n \leq 255$

This code sets up to 16 vertical tab stops at the line specified by  $n_1, n_2$  and so on in the 0 VFU channel. In EPSON mode, the tab stops are memorized as physical positions. In IBM mode, the tab stops are memorized as logical positions.

---

**ESC b****Sets vertical tabs in VFU channels. (EPSON)**

ASCII Code	ESC b <i>m n</i> <sub>1</sub> ... <i>n</i> <sub>8</sub>
Hexadecimal Value	1B 62 <i>m n</i> <sub>1</sub> ... <i>n</i> <sub>8</sub>
Decimal Value	27 98 <i>m n</i> <sub>1</sub> ... <i>n</i> <sub>8</sub>
Range	<i>m</i> = channel

This command sets vertical tabs in one of the 8 VFU channels available. *n*<sub>1</sub>-*n*<sub>8</sub> tab stops. Up to 16 tab stops can be set in each channel at the line specified by *n*<sub>1</sub>, *n*<sub>2</sub> and so on in numerical ascending order.

---

**ESC C 0****Sets form length to *n* inches. (IBM, EPSON)**

ASCII Code	ESC C 0 <i>n</i>
Hexadecimal Value	1B 43 00 <i>n</i>
Decimal Value	27 67 0 <i>n</i>
Range	1 ≤ <i>n</i> ≤ 22

This command sets the form length to the number of inches specified by *n*. The current position of the paper is assumed as top of form. Setting the paper length cancels the top and bottom-margin settings.

---

**ESC C****Sets form length to *n* lines. (IBM, EPSON)**

ASCII Code	ESC C <i>n</i>
Hexadecimal Value	1B 43 <i>n</i>
Decimal Value	27 67 <i>n</i>
Range	1 ≤ <i>n</i> ≤ 127

This command sets the form length to the number of lines specified by *n* at the current vertical spacing. The current position of the paper is assumed as top of form.

## ESC D

### Sets horizontal tabs. (IBM, EPSON)

ASCII Code	ESC D $n_1 n_2 \dots n_x 0$
Hexadecimal Value	1B 44 $n_1 n_2 \dots n_x 00$
Decimal Value	27 68 $n_1 n_2 \dots n_x 0$
Range	$1 \leq n \leq 255$

This sequence sets up to 28 (IBM mode) or 32 (EPSON mode) horizontal tab stops after canceling the current setting. The  $n_1$  to  $n_x$  parameters specify the number of columns at which horizontal tab stops are required and must be entered in the sequence in ascending numerical order. Any value outside this range will be ignored.

In IBM mode, the tab stop position is memorized as logical position in the page so that it is affected by changing the horizontal spacing. The columns are numbered 1 through 136.

In EPSON mode, the tab stop position set by ESC D is memorized as physical position in the page and therefore it is not affected by changing the horizontal spacing. The physical position of the tab stop depends on the horizontal spacing in operation when ESC D is used. The ESC D 0 cancels all active tab stops.

---

## ESC d

### Spaces forwards relative dot position. (IBM)

ASCII Code	ESC d $n_1 n_2$
Hexadecimal Value	1B 64 $n_1 n_2$
Decimal Value	27 100 $n_1 n_2$
Range	$0 \leq n_1, n_2 \leq 255$

This command moves the print carriage of a  $(n_1 + (n_2 * 256)) / 120$  inch displacement on the right of its current dot position. If the selected position is outside the current right margin, it is forced to the last column.

**ESC e****Spaces backwards relative dot position. (IBM)**

ASCII Code	ESC e $n_1 n_2$
Hexadecimal Value	1B 65 $n_1 n_2$
Decimal Value	27 101 $n_1 n_2$
Range	$0 \leq n_1, n_2 \leq 255$

This command moves the print carriage of a  $(n_1 + (n_2 * 256)) / 120$  inch displacement on the left of its current dot position.

---

**ESC I****Sets left margin (10 cpi). (EPSON)**

ASCII Code	ESC I $n$
Hexadecimal Value	1B 6C $n$
Decimal Value	27 108 $n$
Range	$0 \leq n \leq 255$

This code sets the left margin at the current horizontal spacing. It must be sent at the beginning of the line. The  $n$  parameter specifies the number of columns. For each type of horizontal spacing there is a different range of possible values, as shown in the following table.

Character Width	Horizontal Spacing	Range of columns
Double Width	5 cpi	$0 \leq n \leq 67$
	6 cpi	$0 \leq n \leq 80$
	7.5 cpi	$0 \leq n \leq 100$
	8.5 cpi	$0 \leq n \leq 114$
	10 cpi	$0 \leq n \leq 134$
Normal	10 cpi	$0 \leq n \leq 134$
	12 cpi	$0 \leq n \leq 160$
	15 cpi	$0 \leq n \leq 201$
	17 cpi	$0 \leq n \leq 229$
	20 cpi	$0 \leq n \leq 255$

Any value outside the accepted range is ignored and the previous setting remains in effect. The left margin must be smaller than the right margin. The physical position set for the left margin does not change if the horizontal spacing is modified. This command overrides the menu setting.

---

## ESC N

**Sets the skipover perforation to  $n$  lines. (IBM, EPSON)**

ASCII Code	ESC N $n$
Hexadecimal Value	1B 4E $n$
Decimal Value	27 78 $n$
Range	$1 \leq n \leq 127$ (EPSON mode) $1 \leq n \leq 225$ (IBM mode)

The skipover perforation is the sum of top and bottom margins values at the selected vertical spacing. The  $n$  parameter must be less than the current form length.

The skipover is memorized as physical position on the page. It is cancelled by ESC O or changing the form length.

The skipover value, when accepted, will set the top and bottom margins according to the operator panel setting (see User Manual):

If the top margin set via operator panel is greater than the skipover value, then the following value of the margins will be set:

Top margin = skipover value

Bottom margin = 0

If the top margin set via operator panel is less or equal to the skipover value, then the following value of the margins will be set:

Top margin = operator panel value

Bottom margin = the difference between skipover value and top margin value

If the sum of the top and bottom margins values set via operator panel is less than the skipover value, the following values for the margins will be set:

Top margin = operator panel value

Bottom margin = the difference between skipover value and top margin value

Changing the vertical spacing does not affect the skipover distance. This can be changed by a further ESC N command or can be reset by the ESC O command, which resets the skipover value to 0.

The skipover perforation will be executed when the end of the page is reached with a LF, VT or FF code and not with the ESC J or ESC C command, the skipover perforation is cancelled and must therefore be set again.

---

## ESC O

**Disables the skipover perforation. (IBM, EPSON)**

ASCII Code	ESC O
Hexadecimal Value	1B 4F
Decimal Value	27 79

This sequence sets the number of lines of the skipover perforation to the value 0 and so any skip perforation set by ESC N is cancelled.

---

## ESC Q

**Sets the right margin (10 cpi). (EPSON)**

ASCII Code	ESC Q <i>n</i>
Hexadecimal Value	1B 51 <i>n</i>
Decimal Value	27 81 <i>n</i>
Range	$1 \leq n \leq 255$

This code sets the line length at the current horizontal spacing. It must be sent at the beginning of the line. The *n* parameter specifies the number of columns and for each type of horizontal spacing there is a range of values, as shown in the following table:

Character Width	Horizontal Spacing	Range of columns
Double Width	5 cpi	$1 < n \leq 68$
	6 cpi	$2 < n \leq 81$
	7.5 cpi	$2 \leq n \leq 102$
	8.5 cpi	$2 \leq n \leq 116$
	10 cpi	$2 \leq n \leq 136$
Normal	10 cpi	$2 \leq n \leq 136$
	12 cpi	$4 \leq n \leq 163$
	15 cpi	$4 \leq n \leq 204$
	17 cpi	$4 \leq n \leq 233$
	20 cpi	$4 \leq n \leq 255$

Any value outside the accepted range is ignored and the previous setting remains in effect. The right margin must be greater than the left margin. The physical position set for the right margin does not change if the horizontal spacing is modified.

## ESC R

### Sets all tabs to power-on settings. (IBM)

ASCII Code	ESC R
Hexadecimal Value	1B 52
Decimal Value	27 82

This command sets horizontal tab stops every eight columns starting from column 9 and cancels all vertical tab stops.

## ESC SP

### Sets intercharacter space. (EPSON)

ASCII Code	ESC SP <i>n</i>
Hexadecimal Value	1B 20 <i>n</i>
Decimal Value	27 32 <i>n</i>
Range	$0 \leq n \leq 255$

This command sets the intercharacter space to  $n/120$  inch in Draft printing and  $n/180$  inch in Quality printing.

**ESC X****Sets left and right margins. (IBM)**

ASCII Code	ESC X $n_1 n_2$
Hexadecimal Value	1B 58 $n_1 n_2$
Decimal Value	27 88 $n_1 n_2$
Range	$0 \leq n_1, n_2 \leq 255$

This command specifies left and right margin positions. The  $n_1$  and  $n_2$  parameters indicate respectively the number of columns for the left and right margins at the current spacing. These margins are memorized in terms of absolute displacement from the physical left edge of the page.

If  $n_1$  is equal to 0, the current left margin of the page is used. If  $n_2$  is equal to 0, the current right margin of the page is used. The left margin value must be less than the right margin value. The right margin value must not exceed the physical right edge of the paper; otherwise the maximum acceptable value for the right margin will be set.

---

**FF****Advances paper to the top of the next page. (IBM, EPSON)**

ASCII Code	FF
Hexadecimal Value	0C
Decimal Value	12

This code is a terminator code, when received, causes all data in the print buffer to be printed out. Then it advances the paper to the first printable line of the next form. The line counter is set to the first line value and the column counter is set to the left margin value. This code cancels the double width printing set by SO code.

## HT

### Horizontal Tab. (IBM, EPSON)

ASCII Code	HT
Hexadecimal Value	09
Decimal Value	9

This code moves logically the print carriage to the next horizontal tab stop as defined by ESC D.

In IBM mode, up to 28 horizontal tab stops can be set. The HT code is ignored if no tab stop has been set or if the current print carriage position has moved past the last tab position or if the tab stop is on or beyond the right margin. At power on, the tab stops are set every eight columns (default). The horizontal tab stops can be changed by the ESC D command.

In EPSON mode, up to 32 horizontal tab stops can be set. The default tab stops are memorized as logical position in the page, so that are affected by changing the horizontal spacing. The tab stop positions set by ESC D are memorized as physical position in the page and therefore they are not affected by changing the horizontal spacing. When the double width printing is selected, the tab stop setting must take account that each character occupies two columns. Character scoring (underline, overscore and strikethrough) is not printed between the current print position and the next tab when this command is sent.

---

## VT

### Vertical Tab. (IBM, EPSON)

ASCII Code	VT
Hexadecimal Value	0B
Decimal Value	11

This code is a terminator code and when received causes the contents of the print buffer to be printed before advancing paper to the next vertical tab stop set by the ESC B command.

This code will be executed normally, if vertical tab stops follow the current print position. It will be executed like a FF code (EPSON mode) or like a LF code (IBM mode), if the vertical tab stops follow the bottom of form position (which corresponds to the form length if the bottom of form has not been set) or if the current position is beyond the last vertical tab stop. It will be executed like an LF code if no vertical tab stops have been set by the ESC B command. In EPSON mode, the vertical tabulations are referred to the VHF channel selected by the ESC / m. If no VFU channels have been selected, the printer assumes as default channel 0. This command resets the double width printing set by SO or ESC SO command.

## Print Mode

---

### DC2

#### Sets 10 cpi printing. (IBM)

ASCII Code	DC2
Hexadecimal Value	12
Decimal Value	18

This is a terminator code. It causes all data present in the print buffer to be printed. This command is accepted at any position within the line. The character that follows this command will be printed at 10 cpi. This command does not cancel doublewide printing.

---

### DC2

#### Cancels compressed printing. (EPSON)

ASCII Code	DC2
Hexadecimal Value	12
Decimal Value	18

This is a terminator code. It causes all data present in the print buffer to be printed. It is accepted at any position within the line. The character that follows this command will be printed as follows:

17 CPI	→	10 CPI
20 CPI	→	12 CPI

---

**DC4****Cancels double width printing. (IBM, EPSON)**

ASCII Code           DC 4  
 Hexadecimal Value   14  
 Decimal Value        20

This code cancels the double width printing set by SO or ESC SO code. It has no effect if the ESC W or ESC has set double width commands.

---

**ESC -****Sets or cancels underlined printing. (IBM, EPSON)**

ASCII Code           ESC - *n*  
 Hexadecimal Value   1B 2D *n*  
 Decimal Value        27 45 *n*

Enables or disables the underlined printing. See the following table:

n	Underlined Printing
1	enabled
0	disabled

---

**ESC !****Mater Select. (EPSON)**

ASCII Code           ESC ! *n*  
 Hexadecimal Value   1B 21 *n*  
 Decimal Value        27 33 *n*  
 Range                 $0 \leq n \leq 255$

This command selects any combination of several attributes. The parameter *n* is the sum up of the printing style values to be used. See the following table:

To print the desiderated combination of printing attributes, calculate the *n* parameter by adding up the values of each attribute.

---

**ESC ( -**  
**Sets score line. (EPSON)**

ASCII Code	ESC ( - $n_1 n_2 m d_1 d_2$
Hexadecimal Value	1B 28 2D $n_1 n_2 m d_1 d_2$
Decimal Value	27 40 45 $n_1 n_2 m d_1 d_2$
Range	$n_1 = 3$ $n_2 = 0$ $m = 1$ $1 \leq d_1 \leq 3; d_2 = 1$

This command enables/disables scoring of all characters and spaces following this command according to the following parameters:

$d_1$	Line
1	Underline
2	Strikethrough
3	Overscore

$d_2$	Line
0	Cancel score line
1	Single continuous line
2	Double continuous line
5	Single broken line
6	Double broken line

Any combination of scoring may be set simultaneously. Each type is independent of other types. Graphics characters are not scored.

---

**ESC :**  
**Sets 12 CPI. (IBM)**

ASCII Code	ESC :
Hexadecimal Value	1B 3A
Decimal Value	27 58

This is a terminator code. It causes all data present in the print buffer to be printed. Subsequent data will be printed at 12 cpi. This command is accepted at any position within the line. The setting of another horizontal spacing resets this command.

**ESC <****Prints characters for one line from left to right. (EPSON)**

ASCII Code	ESC <
Hexadecimal Value	1B 3C
Decimal Value	27 60

This command causes the printing of one line from left to right.

**ESC [ @****Sets double high printing and double line feed. (IBM)**

ASCII Code	ESC [ @ / $h$ $m_1$ $m_2$ $m_3$ $m_4$
Hexadecimal Value	1B 5B 40 / $h$ $m_1$ $m_2$ $m_3$ $m_4$
Decimal Value	27 91 64 / $h$ $m_1$ $m_2$ $m_3$ $m_4$

$/$  = normally 4

$h$  = normally 0

$m_1$  = 0

$m_2$  = 0

This command sets height, width and vertical spacing. The  $/$  and  $h$  parameters specify the number of mode bytes  $m_x$  contained in the sequence. The  $m_3$  and  $m_4$  parameters specify the printing characteristics.  $m_3$  controls both the line spacing and the character height. It has two parts: a high-order half-byte of  $m_3$  controls the line spacing and the low-order half-byte controls the character height.

$m_3$	Character Height	Line Spacing
0	No change	No change
1	Standard character height	Line feeds unchanged
2	Double character height	Line feeds unchanged
16	Character height unchanged	Normal line feeds
17	Standard character height	Normal line feeds
18	Double character height	Normal line feeds
32	Character height unchanged	Double line feeds
33	Standard character height	Double line feeds
34	Double character height	Double line feeds

$m_4$  specifies the character width. Only the low-order half-byte is significant in this mode byte. The high-order half-byte is ignored.

$m_4$	Character Width	Line Spacing
0	No change	No change
1	Standard width character	No change
2	Double width character	No change

---

## ESC \_

### Sets or cancels overscore printing. (IBM mode)

ASCII Code           ESC \_ *n*  
Hexadecimal Value   1B 5F *n*  
Decimal Value        27 95 *n*

Enables or disables the overscore printing. See the following table:

<i>n</i>	Overscore Printing
1	Enabled (all spaces and characters that follow are overscored)
0	Disabled

---

## ESC 4

### Sets italics printing mode. (EPSON)

ASCII Code           ESC 4  
Hexadecimal Value   1B 34  
Decimal Value        27 52

Sets the style attribute of the font to italic. This command selects italic printing even if the italic character table is not selected.

---

## ESC 5

### Cancels italics printing. (EPSON)

ASCII Code           ESC 5  
Hexadecimal Value   1B 35  
Decimal Value        27 53

Sets the style attribute of the font to normal (cancels the italic style attribute previously selected with the ESC 4 command).

---

## ESC a

### Sets Letter Quality justification printing. (EPSON)

ASCII Code	ESC a <i>n</i>
Hexadecimal Value	1B 61 <i>n</i>
Decimal Value	27 97 <i>n</i>
Range	$0 \leq n \leq 3$

Selects from four types of justification, as follows:

n	Justification
0	Left
1	Centered
2	Right
3	allows an uniform printing between the margins when the buffer is full

---

## ESC E

### Sets emphasized printing. (IBM, EPSON)

ASCII Code	ESC E
Hexadecimal Value	1B 45
Decimal Value	27 69

This command starts emphasized printing. The print head strikes each dot twice to produce a darker, bolder character. The second strike is offset horizontally.

---

## ESC F

### Cancels emphasized printing. (IBM, EPSON)

ASCII Code	ESC F
Hexadecimal Value	1B 46
Decimal Value	27 70

This command ends emphasized printing. This escape sequence cancels emphasized printing that was set by ESC E.

---

## ESC G

### Sets double strike printing. (IBM, EPSON)

ASCII Code	ESC G
Hexadecimal Value	1B 47
Decimal Value	27 71

This command starts double-strike printing. ESC G must be canceled by ESC H.

---

## ESC g

### Sets 15 CPI. (EPSON)

ASCII Code	ESC g
Hexadecimal Value	1B 67
Decimal Value	27 103

Subsequent data will be printed at 15 cpi. This command is accepted at any position within the line. If you change the pitch during proportional mode (selected with the ESC p command) the change takes effect when the printer exits proportional mode.

---

## ESC H

### Cancels double strike printing. (IBM, EPSON)

ASCII Code	ESC H
Hexadecimal Value	1B 48
Decimal Value	27 72

This command cancels double-strike printing with the ESC G command.

---

## ESC I

### Selects printing type for resident and DLL characters. (IBM)

ASCII Code	ESC I <i>n</i>
Hexadecimal Value	1B 49 <i>n</i>
Decimal Value	27 73 <i>n</i>

This command selects the resident or the download font in Draft o LQ printing mode. It is ignored if you select a font that has not been downloaded or has been overwritten.

See the following table:

n	Resident font
0	10 cpi Draft
2	10 cpi Quality
4	DLL 10 cpi Draft
6	DLL 10 cpi Quality

---

## ESC M

### Selects 12 or 20 cpi. (EPSON)

ASCII Code	ESC M
Hexadecimal Value	1B 4D
Decimal Value	27 77

This command selects 12-cpi or 20-cpi character printing. If you change the pitch during proportional mode (selected with the ESC p command) the change takes effect when the printer exits proportional mode. The spacing is set to 20 cpi if the compressed printing has been previously selected by SI or ESC SI command.

---

## ESC P

### Selects 10 or 17 cpi. (EPSON)

ASCII Code	ESC P <i>n</i>
Hexadecimal Value	1B 50 <i>n</i>
Decimal Value	27 80 <i>n</i>

This command selects 10-cpi or 17-cpi character printing. If you change the pitch during proportional mode (selected with the ESC p command) the change takes effect when the printer exits proportional mode. The spacing is set to 17 cpi if the compressed printing has been previously selected by SI or ESC SI command.

---

**ESC P****Sets or cancels proportional printing. (IBM)**

ASCII Code	ESC P <i>n</i>
Hexadecimal Value	1B 50 <i>n</i>
Decimal Value	27 80 <i>n</i>

This code is a terminator code; when received it causes all data in the print buffer to be printed out. Then if *n* parameter is equal to 1, the subsequent data is printed in proportional mode. If *n* parameter is equal to 0, proportional mode is reset.

If the any horizontal spacing command is sent to the printer when the proportional printing is set, the command will be stored and will be activated as soon as the proportional printing will be reset.

---

**ESC p****Sets or cancels proportional printing. (EPSON)**

ASCII Code	ESC p <i>n</i>
Hexadecimal Value	1B 70 <i>n</i>
Decimal Value	27 112 <i>n</i>

This command selects the proportional or fixed spacing according to the following values:

n	Proportional Printing
0	Returns to current fixed character pitch
1	Selects proportional character spacing

The changes made to the fixed-pitch setting with ESC P, ESC M or ESC g commands during proportional mode take effect when the printer exits proportional mode. The printer automatically switches to LQ mode when the printer exits proportional mode.

---

## ESC S

### Sets subscript or superscript printing. (IBM, EPSON)

ASCII Code	ESC S <i>n</i>
Hexadecimal Value	1B 53 <i>n</i>
Decimal Value	27 83 <i>n</i>

Selects the subscript or the superscript printing. See the following table:

n	Selection
1	Subscript Print enabled
0	Superscript Print enabled

The proportional printing of the subscript or superscript characters is performed at 2/3 of the proportional character width. Use the ESC T command to cancel super/subscript printing.

---

## ESC SI

### Selects condensed mode. (IBM, EPSON)

ASCII Code	ESC SI
Hexadecimal Value	1B 0F
Decimal Value	27 15

This command selects the condensed mode in which character width is reduced as follows:

10 CPI	→	17.14 CPI
12 CPI	→	20 CPI
Proportional	→	½ width

DC2 code cancels the condensed printing.

---

## ESC S0

**Sets double width printing (one line). (IBM, EPSON)**

ASCII Code	ESC S0
Hexadecimal Value	1B 0E
Decimal Value	27 14

This code causes subsequent data in the same line to be printed as double width characters. It is canceled by the LF, VT, FF, DC4 and ESC W 0 commands or when the buffer is full.

---

## ESC s

**Sets and resets Quiet printing. (EPSON)**

ASCII Code	ESC s <i>n</i>
Hexadecimal Value	1B 73 <i>n</i>
Decimal Value	27 115 <i>n</i>

This command controls printing speed as follows:

n	Selection
0	Normal speed printing
1	Quiet speed printing

---

## ESC T

**Cancels subscript or superscript printing. (IBM, EPSON)**

ASCII Code	ESC T
Hexadecimal Value	1B 54
Decimal Value	27 84

This command cancels subscript or superscript printing selected by ESC S command.

---

## ESC W

### Sets or cancels double width printing. (IBM, EPSON)

ASCII Code        ESC W *n*  
Hexadecimal Value 1B 57 *n*  
Decimal Value     27 87 *n*  
Range              $0 \leq n \leq 1$

Enables or disables the double width printing. See the following table:

n	Selection
1	Double Width Printing enabled
0	Double Width Printing disabled

---

## ESC w

### Sets or cancels double height printing. (EPSON)

ASCII Code        ESC w *n*  
Hexadecimal Value 1B 77 *n*  
Decimal Value     27 119 *n*  
Range              $0 \leq n \leq 255$

Enables or disables the double-height printing of all characters. The first line of a page is not doubled if the ESC w command is sent on the first line; all following lines are printed at double-height. See the following table:

n	Selection
1	Double Height Printing enabled
0	Double Height Printing disabled

**ESC x****Selects Letter Quality or Draft printing. (EPSON)**

ASCII Code	ESC x <i>n</i>
Hexadecimal Value	1B 78 <i>n</i>
Decimal Value	27 120 <i>n</i>

This command selects either LQ or Draft printing according to the following values:

n	Selection
0	Draft printing
1	Letter Quality printing

If you select proportional spacing with the ESC p command during Draft printing, the printer prints an LQ font instead. When you cancel proportional spacing with the ESC p command, the printer returns to Draft printing.

---

**ESC y****Selects yellow ribbon band. (IBM)**

ASCII Code	ESC y
Hexadecimal Value	1B 79
Decimal Value	27 121

---

**SI****Sets condensed printing. (IBM, EPSON)**

ASCII Code	SI
Hexadecimal Value	0F
Decimal Value	15

This command selects the condensed mode in which character width is reduced as follows:

10 CPI	→	17.14 CPI
12 CPI	→	20 CPI
Proportional	→	½ width

DC2 code cancels the condensed printing.

## SO

### Sets double width printing (one line). (IBM, EPSON)

ASCII Code        SO  
Hexadecimal Value 0E  
Decimal Value    14

This code causes subsequent data in the same line to be printed as double width characters. It is canceled by the LF, FF, VT, DC4, ESC W codes or when the buffer is full. This command is not canceled by the VT command when it functions the same as a CR command.

## Character Set

### ESC [ T

#### Selects a Code page.

ASCII Code        ESC [ T 4 0 0 0 Hc Lc  
Hexadecimal Value 1B 5B 54 04 00 00 00 Hc Lc  
Decimal Value    27 91 84 4 0 0 0 Hc Lc

This sequence allows changing the current code page. If an unavailable code page is specified, this command is ignored.

The digits 04 00 00 00 (hexadecimal) and 4 0 0 0 (decimal) are constant.

To calculate *Hc Lc* for a code page that is not shown:

divide the code page number, such as 437, by 256.

- The whole number result is the *Hc* value
- The remainder is the *Lc* value.

If your code page has an alphabetic character, such as 437G, add 10,000 to the code page number, then divide by 256.

Hc	Lc		Hc	Lc	
1	181	CP437	3	99	CP867
33	122	CP437G	3	108	CP876
3	82	CP850	3	109	CP877

Hc	Lc		Hc	Lc	
3	83	CP851	33	124	GOST
3	84	CP852	33	125	TASS
3	85	CP853	33	143	8859/1
3	87	CP855	33	144	8859/2
3	89	CP857	33	145	8859/3
3	90	CP858	33	146	8859/4
3	92	CP860	33	147	8859/5
3	94	CP862	33	148	8859/6
3	95	CP863	33	149	8859/7
3	96	CP864	33	150	8859/8
3	97	CP865	33	151	8859/9
3	98	CP866	3	155	8859/15

---

**ESC \****Prints characters from all characters table. (IBM)**

ASCII Code	ESC \ $n_1 n_2$
Hexadecimal Value	1B 5C $n_1 n_2$
Decimal Value	27 92 $n_1 n_2$
Range	$0 \leq n_1 \leq 255$ $0 \leq n_2 \leq 255$

This command prints the next  $n_1 + n_2 \times 256$  characters from the table of all printable characters.

The total number of characters that will be printed from the table of all printable characters is equal to  $n_1 + (n_2 \times 256)$ . For example, to print 300 characters from the table of all printable characters:  $n_1 = 44$ ,  $n_2 = 1$ . The control codes are not recognized as long as this sequence is active. The space character is printed as an unassigned character.

---

**ESC ^****Prints a single character from the all characters table. (IBM)**

ASCII Code	ESC ^ <i>n</i>
Hexadecimal Value	1B 5E <i>n</i>
Decimal Value	27 94 <i>n</i>
Range	$0 \leq n \leq 255$

This command prints the next character from the all characters table. This sequence prints only one character from the all character table.

---

**ESC 6****Enables Upper Control Codes. (EPSON)**

ASCII Code	ESC 6
Hexadecimal Value	1B 36
Decimal Value	27 54

This command enables the printing of upper control codes (from 128 to 159). These codes are treated as printable characters instead of control codes. This command has no effect when the italic character table is selected and remains in effect even if you change the character table.

---

**ESC 7****Selects the Character Set 1. (IBM)**

ASCII Code	ESC 7
Hexadecimal Value	1B 37
Decimal Value	27 55

This command selects the character set 1.

---

## ESC 7

### Enables Upper Control Codes. (EPSON)

ASCII Code	ESC 7
Hexadecimal Value	1B 37
Decimal Value	27 55

This command enables the printing of upper control codes (from 128 to 159). These codes are treated as control codes instead of printable characters. This command remains in effect even if you change the character table.

---

## ESC k

### Selects fonts. (EPSON)

ASCII Code	ESC k <i>n</i>
Hexadecimal Value	1B 6B <i>n</i>
Decimal Value	27 107 <i>n</i>

Selects one of the available LQ fonts in Letter Quality mode. See the following table:

n	Types
0	Courier
1	Gothic
2	Courier
5	OCR-B
6	OCR-A

If the Draft mode is selected when this command is sent, the new LQ font will be selected when the printer returns to LQ printing.

---

**ESC R****Selects an international character set. (EPSON)**

ASCII Code        ESC R *n*  
 Hexadecimal Value 1B 52 *n*  
 Decimal Value     27 82 *n*  
 Range               $0 \leq n \leq 12$

This code causes the national character set to be selected according to the parameter *n*. See the following table:

n		n	
0	USA	7	Spain-I
1	France	8	Japan
2	Germany	9	Norway
3	United Kingdom	10	Denmark-II
4	Denmark-I	11	Spain-II
5	Sweden	12	Latin America
6	Italy		

---

**ESC t****Selects characters table. (EPSON)**

ASCII Code        ESC t *n*  
 Hexadecimal Value 1B 74 *n*  
 Decimal Value     27 116 *n*  
 Range               $0 \leq n \leq 3$

Selects the character table to be used for printing from among the four character tables described below:

n	Character Tables
0	Standard Italic Character Set
1	PC437
2	User-defined characters

## Download Character

---

### ESC %

#### Selects user-defined character set. (EPSON)

ASCII Code	ESC % <i>n</i>
Hexadecimal Value	1B 25 <i>n</i>
Decimal Value	27 37 <i>n</i>

This command switches between the normal (resident) and user-defined (downloaded) characters:

n	Selection
1	Selects the use of down-loaded character set in RAM
0	Selects the use of resident character set in ROM

### ESC &

#### Defines user-defined characters. (EPSON)

The format for this command depends on whether you are defining draft characters or LQ characters.

##### *Draft mode*

ASCII Code	ESC & NUL <i>n m [a<sub>0</sub> a<sub>1</sub> a<sub>2</sub> d<sub>1</sub> d<sub>2</sub> ... d<sub>k</sub>]</i>
Hexadecimal Value	1B 26 00 <i>n m [a<sub>0</sub> a<sub>1</sub> a<sub>2</sub> d<sub>1</sub> d<sub>2</sub> ... d<sub>k</sub>]</i>
Decimal Value	27 38 0 <i>n m [a<sub>0</sub> a<sub>1</sub> a<sub>2</sub> d<sub>1</sub> d<sub>2</sub> ... d<sub>k</sub>]</i>
Range	$0 \leq n \leq 127$ $0 \leq m \leq 127$ $n \leq m$ $0 \leq a_1 \leq 15$ $0 \leq a_0+a_1+a_2 \leq 18$

##### *LQ mode*

ASCII Code	ESC & NUL <i>n m [a<sub>0</sub> a<sub>1</sub> a<sub>2</sub> d<sub>1</sub> d<sub>2</sub> ... d<sub>k</sub>]</i>
Hexadecimal Value	1B 26 00 <i>n m [a<sub>0</sub> a<sub>1</sub> a<sub>2</sub> d<sub>1</sub> d<sub>2</sub> ... d<sub>k</sub>]</i>
Decimal Value	27 38 0 <i>n m [a<sub>0</sub> a<sub>1</sub> a<sub>2</sub> d<sub>1</sub> d<sub>2</sub> ... d<sub>k</sub>]</i>
Range	$0 \leq n \leq 127$ $0 \leq m \leq 127$ $n \leq m$ $0 \leq a_1 \leq 37$ $0 \leq a_0+a_1+a_2 \leq 42$

The data within brackets above is repeated for each character you define.

The parameters in the command have the following meaning:

- $n$  and  $m$      The  $n$  and  $m$  parameters are two decimal numbers that define the first and the last characters to be replaced in the character set in use.
- $a_0$              It sets space to the left of each proportional user-defined character.
- $a_1$              Actual width of user-defined characters.
- $a_2$              It sets space to the right of each proportional user-defined.
- $d_1...d_n$        They are the character data that is printed.

Maximum character width (height x width):

Print quality		10 cpi	12 cpi	15 cpi	Proportional
Draft		24 x 12	24 x 10	24 x 8	Not available
LQ	Normal size	24 x 36	24 x 30	24 x 24	24 x 42
	Super/subscript	16 x 36	16 x 30	16 x 24	16 x 42

## ESC :

### Copies characters from ROM to RAM. (EPSON)

ASCII Code	ESC : NUL $n$ $m$
Hexadecimal Value	1B 3A 00 $n$ $m$
Decimal Value	27 58 $n$ $m$
Range	$0 \leq n \leq 127$ $m = 0$

This code copies the character generator in ROM into RAM area dedicated to the user-defined characters. The  $n$  parameter represents the LQ typestyle.

Printing	n	Font
Draft	0	Draft
Quality	0	Courier
	1	Gothic
	2	Courier
	5	OCR-B
	6	OCR-A

Before copying ROM characters to RAM, cancel italics with the ESC 5 command. After copying you can italicize characters by sending the ESC 4 command.

---

## ESC =

**Defines downloaded characters. (IBM)**

ASCII Code	ESC = <i>n m i d p t</i>
Hexadecimal Value	1B 3D <i>n m i d p t</i>
Decimal Value	27 61 <i>n m i d p t</i>

This sequence allows you to design and then down-line load special characters not present in the character set in use. Whenever you would like to start the DLL setting procedure, proceed as follows:

- Copy the character generator in ROM into RAM
- Select the DLL generator

There are 256 entries of 9 bytes that compose the look up table of a character generator. One entry describes one character as follows:

Byte 1, 2      The absolute address of the character definition.

Byte 3 :

- Bit 7      *1*: indicates that the character is a graphic character (connects at 6 lpi)  
*0*: indicates that the character is an alphanumerical character

- Bit 6      *0*: indicates a DLL character  
              *1*: indicates a resident character
- Bit 5 to 0    These 6 bits indicate the effective number of dot columns of the character shape stored in memory.

Byte 4:

- Bit 7, 6      Graphic character description:
  - *0*: shading character
  - *1*: line drawing character
  - *10*: underscored character
  - *11*: not supported

All graphics characters are 30 dot high. An underscored character is defined as a blank graphic (all zeros) and it is automatically generated by the printer. A shading character repeats dots 1-6 of each column as dots 25 through 30 respectively. A line drawing character repeats dots 23 and 24 as the pairs 25 and 26, 27 and 28, 29 and 30.

- Bit 5 to 0    The number of dot columns of the character shape minus one. For example: the character width of Draft generator is 10 dots and bit 5 to 0 must be set to 9.

- Bit 5 to 9 Compression mask description. It is used to optimize the memory occupation and it is based on the concept that a dot column on its left is not stored. You can calculate the compression mask of a character only after designing the entire character. Every bit is associated with a dot column with the bit 7 of byte 5 associated with the leftmost column. The bit is set to 1 if the column is equal to the preceding one; otherwise, it is set to 0. If the character is longer than 39 dot columns the remaining dot columns must be stored without compression. The bit 40 (bit 0 of byte 9) must be 0. If no compression is present in the character, byte 5 to 9 is composed by all zeros.

If you wish to copy an entry over another entry so that two characters with the same characteristics and different code are present in the same look up table, the DLL sequence ESC = *n m id p t* has the following meaning:

<i>n</i> and <i>m</i>	Indicate the byte number of the sequence <i>n</i> is the low part and <i>m</i> is the high part.
<i>id</i> :	Indicate the printer model. The <i>id</i> related to your printer is <i>23H</i> .
<i>p</i> and <i>t</i>	Indicate the memory address of the character that you wish to replace. <i>p</i> is the low part and <i>t</i> is the high part.
<i>data</i>	Is the entry <i>9 bytes</i> of the character that you want to position at address specified by <i>p</i> and <i>t</i> .

## Bit-Image

### ESC \*

#### Sets dot graphics mode. (EPSON)

ASCII Code           ESC \*  $m\ n_1\ n_2\ d_1..d_x$   
 Hexadecimal Value   1B 2A  $m\ n_1\ n_2\ d_1..d_x$   
 Decimal Value       27 42  $m\ n_1\ n_2\ d_1..d_x$

$m = 0, 1, 2, 3, 4, 6, 32, 33, 38, 39, 40$

$0 \leq n_1 \leq 255$

$0 \leq n_2 \leq 12$

This command prints dot-graphics in 8-dot columns or 24-dot columns, depending on the following parameters:

$m$                    Specifies the dot density

$n_1, n_2$            Specify the total number of columns of graphics data according to the formula:

number of dot columns =  $(n_1 + (n_2 \times 256))$

$$n_2 = INT \frac{(number\ of\ dot\ columns)}{256}$$

$$n_1 = MOD \frac{(number\ of\ dot\ columns)}{256}$$

$d_1 \dots d_x$        Bytes of graphics data;  $x$  is determined by multiplying the total number of columns times the number of bytes required for each column. See the table below:

Parameter $m$ in ESC * command	Horizontal density (dpi)	Vertical density (dpi)		Adjacent dot printing	Dots per column	Bytes per column
0	60	60	60	Yes	8	1
1	120	60	60	Yes	8	1
2	120	60	60	No	8	1
3	240	60	60	No	8	1
4	80	60	60	Yes	8	1
6	90	60	60	Yes	8	1

---

## ESC ?

### Reassigns dot graphics mode. (EPSON)

ASCII Code           ESC ? *n m*  
Hexadecimal Value   1B 3F *n m*  
Decimal Value       27 63 *n m*

Reassigns one of the dots graphics mode (described in the command ESC \*) to one of the following commands: ESC K, ESC L, ESC Y and ESC Z. The parameter *n* specifies a character (K, L, Y or Z) which is reassigned to specific mode.

*m* = 0,1,2,3,4,6,32,33,38,39,40

m	n
0	(K): ESC K graphic command
1	(L): ESC L graphic command
2	(Y): ESC Y graphic command
3	(Z): ESC Z graphic command

---

## ESC K

### Normal density dot graphics printing (60 dpi). (IBM, EPSON)

ASCII Code           ESC K *n<sub>1</sub> n<sub>2</sub> p<sub>1</sub> p<sub>2</sub>... p<sub>x</sub>*  
Hexadecimal Value   1B 4B *n<sub>1</sub> n<sub>2</sub> p<sub>1</sub> p<sub>2</sub>... p<sub>x</sub>*  
Decimal Value       27 75 *n<sub>1</sub> n<sub>2</sub> p<sub>1</sub> p<sub>2</sub>... p<sub>x</sub>*  
Range                0 ≤ *n<sub>1</sub>* ≤ 255  
                        0 ≤ *n<sub>2</sub>* ≤ 31  
                        0 ≤ *p* ≤ 255

Terminator code. This command prints dot graphics at 60 horizontal dot per inch by 60 vertical dpi. The parameter values should be calculated as follows:

*n<sub>1</sub>*           Remainder of the number of column divided by 256.

*n<sub>2</sub>*           Integer result of the previous division.

---

$p_1$	Sum of the values corresponding to the dots that should be printed in the first column of the graphics pattern.
$p_2$	Sum of the values corresponding to the dots that should be printed in the second column of the graphics pattern.
$p_x$	Sum of the values corresponding to the dots that should be printed in the last column of the graphics pattern.

---

## ESC L

### Double density dot graphics printing (120 dpi). (IBM, EPSON)

ASCII Code	ESC L $n_1 n_2 p_1 p_2 \dots p_x$
Hexadecimal Value	1B 4C $n_1 n_2 p_1 p_2 \dots p_x$
Decimal Value	27 76 $n_1 n_2 p_1 p_2 \dots p_x$
Range	$0 \leq n_1 \leq 255$ $0 \leq n_2 \leq 31$ $0 \leq p \leq 255$

Terminator code. This command prints dot graphics at 120 horizontal dot per inch by 60 vertical dpi. The parameter values should be calculated as follows:

$n_1$	Remainder of the number of column divided by 256.
$n_2$	Integer result of the previous division.
$p_1$	Sum of the values corresponding to the dots that should be printed in the first column of the graphics pattern.
$p_2$	Sum of the values corresponding to the dots that should be printed in the second column of the graphics pattern.
$p_x$	Sum of the values corresponding to the dots that should be printed in the last column of the graphics pattern.

---

## ESC Y

### Double density dot graphics printing at double-speed graphics (120 virtual dpi). (IBM, EPSON)

ASCII Code	ESC Y $n_1 n_2 p_1 p_2 \dots p_x$
Hexadecimal Value	1B 59 $n_1 n_2 p_1 p_2 \dots p_x$
Decimal Value	27 89 $n_1 n_2 p_1 p_2 \dots p_x$
Range	$0 \leq n_1 \leq 255$ $0 \leq n_2 \leq 31$ $0 \leq p \leq 255$

Terminator code. This command prints dot graphics at 120 horizontal dot per inch by 60 vertical dpi. The parameter values should be calculated as follows:

- $n_1$       Remainder of the number of column divided by 256.
- $n_2$       Integer result of the previous division.
- $p_1$       Sum of the values corresponding to the dots that should be printed in the first column of the graphics pattern.
- $p_2$       Sum of the values corresponding to the dots that should be printed in the second column of the graphics pattern.
- $p_x$       Sum of the values corresponding to the dots that should be printed in the last column of the graphics pattern.

---

## ESC Z

### Quadruple density dot graphics printing (240 virtual dpi). (IBM, EPSON)

ASCII Code	ESC Z $n_1 n_2 p_1 p_2 \dots p_x$
Hexadecimal Value	1B 5A $n_1 n_2 p_1 p_2 \dots p_x$
Decimal Value	27 90 $n_1 n_2 p_1 p_2 \dots p_x$
Range	$0 \leq n_1 \leq 255$ $0 \leq n_2 \leq 31$ $0 \leq p \leq 255$

Terminator code. This command prints dot graphics at 240 horizontal dot per inch by 60 vertical dpi. The parameter values should be calculated as follows:

- $n_1$  Remainder of the number of column divided by 256.
- $n_2$  Integer result of the previous division.
- $p_1$  Sum of the values corresponding to the dots that should be printed in the first column of the graphics pattern.
- $p_2$  Sum of the values corresponding to the dots that should be printed in the second column of the graphics pattern.

## Data Input Control

---

### CAN

#### Cancels line. (EPSON)

ASCII Code	CAN
Hexadecimal Value	18
Decimal Value	24

This code clears all printable characters and bit-image graphics on the current line. This code moves the print position to the left-margin position.

---

### CAN

#### Cancels data. (IBM)

ASCII Code	CAN
Hexadecimal Value	18
Decimal Value	24

This code clears all data stored in the preceding print buffer but does not change the current print position.

---

**DC1****Selects printer. (IBM)**

ASCII Code	DC1
Hexadecimal Value	11
Decimal Value	17

This command causes the printer to be enabled after it has been disabled by the ESC Q 22 command.

---

**DC1****Selects printer. (EPSON)**

ASCII Code	DC1
Hexadecimal Value	11
Decimal Value	17

This command causes the printer to be enabled after it has been disabled by the DC3 command.

---

**DC3****Deselects printer. (EPSON)**

ASCII Code	DC3
Hexadecimal Value	13
Decimal Value	19

This code deselects the printer. The printer remains deselected until it receives a DC1 command or power is turned off then on again. The printer ignores the ESC @ command (initialize printer) when it is deselected.

---

**ESC #****Cancels MSB control. (EPSON)**

ASCII Code	ESC #
Hexadecimal Value	1B 23
Decimal Value	27 35

This command cancels any controls on the MSB (bit number 7) set by ESC = or ESC > commands; printer then accepts all MSB data as is.

**ESC =****Sets MSB to 0. (EPSON)**

ASCII Code	ESC =
Hexadecimal Value	1B 3D
Decimal Value	27 61

This command sets the Most Significant bit (bit number 7) of all incoming data to 0. All data is affected including graphics data.

---

**ESC >****Sets MSB to 1. (EPSON)**

ASCII Code	ESC >
Hexadecimal Value	1B 3E
Decimal Value	27 62

This command sets the Most Significant bit (bit number 7) of all incoming data to 1. All data is affected including graphics data.

---

**ESC Q****Deselects Printer. (IBM)**

ASCII Code	ESC Q <i>n</i>
Hexadecimal Value	1B 51 <i>n</i>
Decimal Value	27 81 <i>n</i>

This sequence tells the printer not to accept data from the host. The host must reset the printer or select the printer by using DC1 (Select Printer) to accept data. To deselect the printer, use ESC Q22.

## Miscellaneous

---

### BEL

#### **Buzzer. (EPSON)**

ASCII Code	BEL
Hexadecimal Value	07
Decimal Value	7

This code sounds the printer's buzzer (for about 0.25 seconds).

---

### BS

#### **Print and space back one position. (IBM, EPSON)**

ASCII Code	BS
Hexadecimal Value	08
Decimal Value	8

This code causes the printing to be continued from one column to the left of the current carriage position. The printer ignores this command if the print position moves to the left of the left margin.

---

### ESC @

#### **Initializes the printer. (EPSON)**

ASCII Code	ESC @
Hexadecimal Value	1B 40
Decimal Value	27 64

This sequence causes the printer to be initialized. It, inserted in the input buffer, will be executed during data processing, so that data preceding this command will be printed according to the previous setting. It causes the printer:

- To go back to the current printer setup settings
- To cancel any print attributes selected
- To initialize the printer carriage
- To reset the column counter
- To set the horizontal tabulations every 8 columns
- To clear all vertical tabulations

Only the selection of Draft/Quality printing, DDL and the selected character generator are maintained.

## **ESC j**

### **Stops printing. (IBM)**

ASCII Code           ESC j *n*  
Hexadecimal Value   1B 6A *n*  
Decimal Value        27 106 *n*

This command stops the printer. The printer goes offline and a BUSY signal is sent to the computer. To place the printer online, press the Online/Offline key.

---

## **ESC U**

### **Sets printing direction. (IBM, EPSON)**

ASCII Code           ESC U *n*  
Hexadecimal Value   1B 55 *n*  
Decimal Value        27 85 *n*

Selects bidirectional or unidirectional printing, according to the parameters below:

n	Direction
0	Bidirectional printing
1	Unidirectional (left to right) printing

Unidirectional printing provides better alignment of vertical lines while bidirectional printing is faster.

## COMPUPRINT Mode

This printer according to the Native COMPUPRINT Mode supports the following printer commands.

### Format Control

---

#### **DC4 DC4 ESC 3 1**

**Sets vertical spacing 12 lines/30 mm. (Compuprint)**

ASCII Code	DC4 DC4 ESC 3 1
Hexadecimal Value	14 14 1B 33 31
Decimal Value	20 20 27 51 49

This command sets vertical spacing to 12 lines per 30 mm.

---

#### **DC4 DC4 ESC 3 3**

**Sets vertical spacing to 3 lines/30 mm. (Compuprint)**

ASCII Code	DC4 DC4 ESC 3 3
Hexadecimal Value	14 14 1B 33 33
Decimal Value	20 20 27 51 51

This command sets vertical spacing to 3 lines per 30 mm.

---

#### **DC4 DC4 ESC 3 4**

**Sets vertical spacing 4 lines/30 mm. (Compuprint)**

ASCII Code	DC4 DC4 ESC 3 4
Hexadecimal Value	14 14 1B 33 34
Decimal Value	20 20 27 51 52

This command sets vertical spacing to 4 lines per 30 mm.

---

**DC4 DC4 ESC 3 6****Sets vertical spacing 6 lines/30 mm. (Compuprint)**

ASCII Code           DC4 DC4 ESC 3 6  
Hexadecimal Value   14 14 1B 33 36  
Decimal Value        20 20 27 51 54

This command sets vertical spacing to 6 lines per 30 mm.

---

**DC4 DC4 ESC 3 8****Sets vertical spacing 8 lines/30 mm. (Compuprint)**

ASCII Code           DC4 DC4 ESC 3 8  
Hexadecimal Value   14 14 1B 33 38  
Decimal Value        20 20 27 51 56

This command sets vertical spacing to 8 lines per 30 mm.

---

**DC4 DC4 ESC A****Sets the horizontal spacing to 15, 17, 20 CPI. (Compuprint)**

ASCII Code           DC4 DC4 ESC A *n*  
Hexadecimal Value   14 14 1B 41 *n*  
Decimal Value        20 20 27 65 *n*

This is terminator code and therefore causes the current contents of the print buffer to be printed out. Then, the subsequent characters will be printed at the horizontal spacing specified by the *n* parameter.

n	Spacing
4	15 cpi
5	17 cpi
6	20 cpi

## Automatic Sheet Feeder

---

### ESC EM

**Ejects cut sheets and selects or deselects the Automatic Sheet Feeder. (EPSON)**

ASCII Code        ESC EM *n*  
 Hexadecimal Value 1B 19 *n*  
 Decimal Value     27 25 *n*

This command controls cut sheet feeding (ASF) according to the parameters below:

n	Description
0	Disables ASF and the printer (off line) after ejecting cut sheet
1	Enables the ASF and selects Bin 1
2	Enables the ASF and selects Bin 2
4	The ASF is enabled and the previous default bin is selected

---

### //n//

**ASF and Bin selection. (Compuprint)**

ASCII Code        //n//  
 Hexadecimal Value 2F 2F *n* 2F 2F  
 Decimal Value     47 47 *n* 47 47

This command must start and finish with a CR, a LF or both; otherwise it will be handled as if it were printable data.

n	Effect
1	Selects bin 1
2	Selects bin 2
C	Selects bin 1 once then bin 2. First sheet fed from bin 1 and following from bin 2
E	Selects envelope tray
R	Ejects the sheet without selecting

## Native Character Set

### DC4 DC4 ESC g

**Selects LQ fonts (Compuprint).**

ASCII Code            DC4 DC4 ESC g *n*  
 Hexadecimal Value    14 14 1B 67 *n*  
 Decimal Value         20 20 27 103 *n*

n	Setting
0	Courier
1	Gothic
2	Courier

If the down-line loading is selected, the command is stored and will be activated as soon as the down-line loading will be canceled. The OCR-A and OCR-B print styles are selected by the DC4 DC4 ESC S command.

### DC4 DC4 ESC S

**Selects character set ISO Character Sets or Code Pages. (Compuprint)**

ASCII Code            DC4 DC4 ESC S *n*  
 Hexadecimal Value    14 14 1B 53 *n*  
 Decimal Value         20 20 27 83 *n*

n	Character Set
1	ISO 8859/1 Latin 1
2	ISO 8859/2 Latin 2
3	ISO 8859/3 Latin 3
4	ISO 8859/4 Latin 4
5	ISO 8859/5 Latin/Cyrillic
6	ISO 8859/6 Latin/Arabic

n	Character Set
7	ISO 8859/7 Latin/Greek
8	ISO 8859/8 Latin/Hebrew
9	ISO 8859/9 Latin 5
15	ISO 8859/15 Latin 9
128	CP 437 USA
129	CP 850 Multilingual
130	CP 860 Portugal
131	CP 863 Canada/France
132	CP 865 Denmark/Norway
133	CP 851 Greek
134	CP 862 Hebrew
135	CP 864 Arabic
136	TASS Cyrillic
137	CP 852 Eastern Europe
138	CP 876 OCR-A
139	CP 877 OCR-B
140	CP 855 Cyrillic
141	CP 866 Russian
142	GOST Cyrillic
145	CP 437G Greek
146	CP 853 Turkish
147	CP 857 Turkish
148	CP 867 Turkish
149	CP 858 Euro PC Multilingual

## Bar Codes

### DC4 DC4 ESC !

#### Bar Code Selection.

ASCII Code            DC4 DC4 ESC ! *htfFroqbsBSiEM*  
 Hexadecimal Value    14 14 1B 21 *htfFroqbsBSiEM*  
 Decimal Value        20 20 27 33 *htfFroqbsBSiEM*

$h$  = Bar Code Height at  $n/6''$ ,  $1 \leq h \leq 30$

$t$  = Standard Bar Code to use

t	Name	
1	8-digits European Article Numbering	EAN-8
2	13-digits European Article Numbering	EAN-13
3	Universal Product Code Type A	UPC-A
7, 8, 9	8-digits European Article Numbering	EAN-8
17	Code 2 of 5 Interleaved	C25-INT
18	Code 2 of 5 Industrial	C25-IND
19	Code 2 of 5 Matrix	C25-MTX
20	Code 3 of 9	Code-39
21	8-digits European Article Numbering	EAN-8
22	Codabar (all types)	CODABAR
23	Code 128	CODE-128
24	USPS-PostNet	POSTNET

$f$  = Readable character printing

$f = 1$  printing enabled

$f = 0$  printing disabled

$F$  = Font selection for the printable characters

F	Selection
0	Selected font by r value
1	Default font for text
2	Special font for OCR-A or OCR-B bar codes according to the t value
3	Special font for OCR-A bar codes
4	Special font for OCR-B bar codes

$r$  = Bar code rotation

r	Selection
0	No rotation
1	Rotation at $0^\circ$
2	Rotation at $90^\circ$
3	Rotation at $180^\circ$
4	Rotation at $270^\circ$

$o$  = Check digit inserted as last character of the received string according to the bar code

$q$  = Horizontal graphic density of the bar code

q	Selection
0	1/60"
1	1/180"

$b$  = Narrow bar width in  $n/180''$ ,  $3 < b < 18$

$s$  = Narrow space width in  $n/180''$ ,  $3 < s < 18$

$B$  = Wide bar width in  $n/180''$ ,  $6 < B < 72$

$S$  = Wide space width in  $n/180''$ ,  $6 < S < 72$

$i$  = Spacing between characters in  $n/180''$ ,  $3 < i < 72$

$EM$  = Check sequence terminator

## Bar Code Description

EAN-8	DC4 DC4 ESC! $n$ 1 $p$ $EM$
	The EAN-8 bar code data field must only contain numeric data, and must be eight bytes long, check digit included. The EAN-8 character repertoire provides 0 to 9 ASCII numeric figures. $n$ indicates the bar code height in units of 1/6 inch and must be in the range 1 to 12. $p$ must be NUL (hex. 00) if no Human Readable Characters are to be printed, and 1 (hex. 01) if they are to be printed. The range of values for $n$ and $p$ parameters can be increased of 32 dec.

<b>EAN-13</b>	DC4 DC4 ESC! <i>n 2 p EM</i>
	The EAN-13 bar code data field must only contain numeric data, and must be 13 bytes long, check digit included. The EAN-13 character repertoire provides 0 to 9 ASCII numeric figures. <i>n</i> indicates the bar code height in units of 1/6 inch and must be in the range 1 to 12. If you want to print the Human Readable Characters, <i>p</i> must have the value 1 (hex. 01); otherwise this value must be NUL (hex. 00). The range of values for <i>n</i> and <i>p</i> parameters can be increased of 32 dec.
<b>UPC-A</b>	DC4 DC4 ESC! <i>n 3 p EM</i>
	The UPC-A bar code data field allows 10 numeric characters plus one system number digit and one check digit, at the leftmost and rightmost positions respectively. The UPC-A character repertoire provides 0 to 9 ASCII numeric figures. <i>n</i> indicates the bar code height in units of 1/6 inch and must be in the range 1 to 12. <i>p</i> must be NUL (hex. 00) if no Human Readable Characters are to be printed, and 1 (hex. 01) if they are to be printed. The range of values for <i>n</i> and <i>p</i> parameters can be increased of 32 dec.
<b>2 of 5</b>	DC4 DC4 ESC! <i>n 17 p EM</i>
<b>Interleaved</b>	The 2/5-INTERLEAVED bar code does not have a defined format length. However, the total sum of the characters must be even. <i>n</i> indicates the bar code height and must be in the range 1 to 12. <i>p</i> must be NUL (hex. 00) if no Human Readable Characters are to be printed, and 1 (hex. 01) if they are to be printed.

<b>2 of 5</b>	DC4 DC4 ESC ! <i>n 18 p EM</i>
<b>Industrial</b>	The 2/5 INDUSTRIAL bar code. Data format length is variable and the supported character set only provides ASCII numeric figures 0 to 9. <i>N</i> indicates the bar code height in units of 1/6 inch and must be in the range 1 to 12. The parameter <i>p</i> must be NUL (hex. 00) if no Human Readable Characters are to be printed, and 1 (hex. 01) if they are to be printed.

<b>2 of 5 Matrix</b>	DC4 DC4 ESC ! <i>n 19 p EM</i>
	The 2/5 MATRIX bar code. Data format length is variable and the supported character set only provides ASCII numeric figures 0 to 9. <i>N</i> indicates the bar code height in units of 1/6 inch and must be in the range 1 to 12. The parameter <i>p</i> must be NUL (hex. 00) if no Human Readable Characters are to be printed, and 1 (hex. 01) if they are to be printed.

<b>Code 39</b>	DC4 DC4 ESC ! <i>n 20 p EM</i>
	<p>The CODE 39 bar code. Data format length is variable and must always start and end with an asterisk. It can contain the alphanumeric character listed below:</p> <p>0 1 2 3 4 5 6 7 8 9</p> <p>A B C D E F G H I J K L M N O P Q R S T U V W X Y Z -. SPACE \$ / + % * ( as start / stop character)</p> <p>The parameter indicates the bar code height in units of 1/6 inch and must be in the range 1 to 12. The <i>p</i> parameter must be NUL (hex. 00) if no Human Readable Characters are to be printed, and 1 (hex. 01) if they are to be printed.</p>

<b>CODABAR</b>	DC4 DC4 ESC! <i>n 22 p EM</i>
	<p>The Codabar bar code data fields do not have a defined format length and contain data belonging to the character set listed hereafter:</p> <p>0 1 2 3 4 5 6 7 8 9 - \$: / . +</p> <p>A B C D E N T * a b c d e n t (only as START/STOP characters)</p> <p>The printer allows any combination of START/STOP characters. If the first and last characters of the received string do not belong to the START/STOP characters subset, question marks will be printed in place of HRC string, if possible.</p>
<b>CODE 128</b>	DC4 DC4 ESC ! <i>n 23 p EM</i>
	<p>The CODE-128 bar code data fields do not have a defined format length and contain data belonging to the standard ASCII character set, including control codes.</p> <p>Since GS and EM control codes used within the Compuprint DC4 DC4 ESC (...EM "Print Bar Code" control sequence are part of the supported character set, the host application must SET THE HIGHER-ORDER BIT of the above control codes to allow the printer distinguish between encodable data and string terminators.</p>

<b>POSTNET</b>	DC4 DC4 ESC! $n\ 24\ p\ EM$
	The POSTNET bar code data fields contain only numeric data and do not have a defined format length. POSTNET bar codes have no HRC string printed and the LOW/TALL bars that encode the symbol comply with the U.S.P.S standard; whatever will be $p$ field value.

---

## DC4 DC4 ESC (GS

### Prints bar code symbols (Compuprint)

ASCII Code	DC4 DC4 ESC (GS $n_1\ data\ GS\ n_2\ data\ \dots\ EM$
Hexadecimal Value	14 14 1B 28 1D $n_1\ data\ \dots\ 19$
Decimal Value	20 20 27 40 29 $n_1\ data\ \dots\ 25$
Range	$1 \leq n \leq 12$ $0 \leq p \leq 1$

This sequence causes the bar code symbol to be printed according to the previous selection. If you want to print more than one bar code symbol of the same type and height,  $GS\ n$  defines the distance from the beginning of the line or between two bar code symbols in multiples of 1/72 inch. At the end of the line,  $EM$  must close this command.

## Miscellaneous

---

### DC4 DC4 ESC @

**Re-initializes the printer. (Compuprint)**

ASCII Code	DC4 DC4 ESC @
Hexadecimal Value	14 14 1B 40
Decimal Value	20 20 27 64

This command resets the printer mode and clears the buffer of printable data.

---

### DC4 DC4 ESC Y

**Selects emulation. (Compuprint)**

ASCII Code	DC4 DC4 ESC Y <i>n</i>
Hexadecimal Value	14 14 1B 59 <i>n</i>
Decimal Value	20 20 27 89 <i>n</i>
Range	

Selects the printer emulation type according to the *n* parameter value:

n	Emulation
1	EPSON FX Series
2	IBM Proprinter XL III

# B. Tables

This appendix contains the selected character sets and the hexadecimal to decimal conversion table.

<b>Character Sets .....</b>	<b>B.2</b>
Character Set 1 (CS1) .....	B.2
Character Set 2 (CS2) .....	B.3
<b>EPSON National Variations .....</b>	<b>B.4</b>
<b>IBM National Variations .....</b>	<b>B.5</b>
USA (CP 437) .....	B.5
Greek (CP437-G).....	B.6
Multilingual (CP 850) .....	B.7
Greek (CP 851).....	B.8
Eastern Europe (CP 852) .....	B.9
Turkish (CP 853).....	B.10
Cyrillic (CP 855).....	B.11
Turkish (CP 857).....	B.12
Euro PC Multilingual (CP 858) .....	B.13
Portugal (CP 860).....	B.14
Hebrew (CP 862).....	B.15
Canada/France (CP 863) .....	B.16
Arabic (CP 864).....	B.17
Denmark/Norway (CP 865).....	B.18
Russian (CP 866).....	B.19
Turkish 2 (CP 867).....	B.20
OCR- A (CP 876) .....	B.21
OCR- B (CP 877) .....	B.22
GOST (Russian) .....	B.23
TASS (Cyrillic) .....	B.24
ISO 8859/1 (Latin 1) .....	B.25
ISO 8859/2 (Latin 2) .....	B.26
ISO 8859/3 (Latin 3) .....	B.27
ISO 8859/4 (Latin 4) .....	B.28
ISO 8859/5 (Latin/Cyrillic).....	B.29
ISO 8859/6 (Latin/Arabic) .....	B.30
ISO 8859/7 (Latin/Greek).....	B.31
ISO 8859/8 (Latin/Hebrew).....	B.32
ISO 8859/9 (Latin 5) .....	B.33
ISO 8859/15 (Latin 9).....	B.34
<b>Hexadecimal to Decimal Conversion Table .....</b>	<b>B.35</b>

# Character Sets

## Character Set 1 (CS1)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	NUL		SP	0	@	P	`	p	NUL		Δ	⋮	L	Λ	α	■
01		DC1	!	1	A	Q	a	q		DC1	f	⌘	⊥	⌘	ß	±
02		DC2	"	2	B	R	b	r		DC2	ó	⌘	T	⌘	Γ	¿
03		DC3	#	3	C	S	c	s		DC3	ú			⌘	π	¿
04		DC4	\$	4	D	T	d	t		DC4	ñ		-	⌘	Σ	
05			%	5	E	U	e	u			Ñ	⌘	⌘	⌘	σ	J
06			&	6	F	V	f	v			Δ	⌘	⌘	⌘	μ	+
07	BEL		'	7	G	W	g	w	BEL		ø	⌘	⌘	⌘	τ	≈
08	BS CAN	(	8	H	X	h	x		BS CAN	¿	⌘	⌘	⌘	⌘	ø	°
09	HT	)	9	I	Y	i	y	HT		~	⌘	⌘	⌘	⌘	ø	°
0A	LF	*	:	J	Z	j	z	LF		~	⌘	⌘	⌘	⌘	ø	°
0B	VT ESC	+	;	K	[	k	{	VT ESC	¼	⌘	⌘	⌘	⌘	⌘	ø	√
0C	FF	,	<	L	\	l		FF	½	⌘	⌘	⌘	⌘	⌘	ø	∞
0D	CR	-	=	M	]	m	}	CR		⌘	⌘	⌘	⌘	⌘	ø	²
0E	SO	.	>	N	^	n	~	SO	¾	⌘	⌘	⌘	⌘	⌘	ø	∞
0F	SI	/	?	O	_	o		SI	»	⌘	⌘	⌘	⌘	⌘	ø	SP

# Character Set 2 (CS2)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	NUL		SP	0	@	P	`	p	Ç	É	À	⋮	Ł	ł	α	■
01		DC1	!	1	À	Q	a	q	ù	æ	í	⋮	⊥	⌘	ß	±
02		DC2	"	2	B	R	b	r	é	Æ	ó	⋮	Ť	ŧ	Ŧ	ℤ
03	♥	DC3	#	3	C	S	c	s	à	ø	ú		⌈	⌋	π	≤
04	♦	DC4	\$	4	D	T	d	t	ä	ö	ñ		-	⌋	Σ	∫
05	♣		%	5	E	U	e	u	ä	ö	ñ		†	‡	σ	∫
06	♣		&	6	F	V	f	v	ä	ü	ä		†	‡	μ	+
07	BEL		'	7	G	W	g	w	ç	ù	ø		‡	‡	τ	≈
08	BS	CAN	(	8	H	X	h	x	é	ý	¿		‡	‡	•	•
09	HT		)	9	I	Y	i	y	é	Ö	¬		‡	‡	θ	•
0A	LF		*	:	J	Z	j	z	é	Ü	¬		‡	‡	Ω	•
0B	VT	ESC	+	;	K	[	k	{	í	ç	½		‡	‡	ó	√
0C	FF		,	<	L	\	l		í	é	¼		‡	‡	•	•
0D	CR		-	=	M	]	m	}	í	W	í		=		•	•
0E	SO		.	>	N	^	n	~	À	È	«		‡		•	•
0F	SI		/	?	O	_	o		À	È	»		‡	‡	∩	SP

Tables

# EPSON National Variations

	35	36	64	91	92	93	94	96	123	124	125	126	(dec.)
USA	#	\$	@	[	\	]	^	`	{		}	~	
FRANCE			À	°	Ç	È			É	Ù	Ê	¨	
GERMANY			Š	Ä	Ö	Ü			ä	ö	ü	ß	
UNITED KINGDOM	£												
DENMARK-1				Æ	Ø	Å			æ	ø	å		
SWEDEN		¤	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü	
ITALY				•				é	ù	à	ò	è	ì
SPAIN-1	₧			í	ñ	¿			¨	ñ			
JAPAN					¥							˘	
NORWAY		¤	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü	
DENMARK-2				É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
SPAIN-2			À	í	ñ	¿		é	í	ñ	ó	ú	
LATIN AMERICA			À	í	ñ	¿		é	í	ñ	ó	ú	
	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E	(hex.)

# IBM National Variations

## USA (CP 437)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
02	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
03	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
04	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
05	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
06	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
07	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
08	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
09	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0A	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0B	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0D	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0E	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0F	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F

Greek (CP437-G)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
02	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
03	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
04	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
05	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
06	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
07	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
08	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
09	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0A	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0B	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0D	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0E	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0F	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F

## Multilingual (CP 850)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	É	Á	⋮	Ł	ø	Ó	-
01	⊗	◄	!	1	À	Q	a	q	ü	æ	í	⋮	Ł	Đ	ß	±
02	●	†	"	2	B	R	b	r	é	Æ	ó	⋮	Ť	Ê	Ô	_
03	♥	!!	#	3	C	S	c	s	â	ô	ú		Ť	Ë	Ò	
04	♦	¶	\$	4	D	T	d	t	ä	ö	ñ		-	È	ø	¶
05	♣	§	%	5	E	U	e	u	à	ò	Ñ	Á	†	ı	Ö	§
06	♠	_	&	6	F	V	f	v	ä	ü	ä	Ã	ä	í	µ	÷
07	•	ı	'	7	G	W	g	w	ç	ù	ø	À	À	İ	ı	,
08	□	†	(	8	H	X	h	x	ê	ÿ	ı	©	Ł	İ	Đ	°
09	○	ı	)	9	I	Y	i	y	ë	Ö	●	Ť	Ť	ı	Ú	..
0A	■	→	*	:	J	Z	j	z	è	Ü	¬		Ł	Ť	0	.
0B	♂	←	+	;	K	[	k	{	ı	ø	½	¶	¶	■	Ù	¹
0C	♀	Ł	,	<	L	\	l		ı	£	¼	Ť	Ť	■	Ý	³
0D	►	↔	-	=	M	]	m	}	i	ø	i	©	=	ı	Ý	²
0E	♂	▲	.	>	N	^	n	~	Ä	×	α	¥	Ť	ı	-	■
0F	※	▼	/	?	O	_	o	o	Å	f	»	Ť	■	■	'	

Greek (CP 851)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	T	ı	⋮	L	T	ı	-
01	ø	◄	!	1	À	Q	a	q	ü		ı̇	⋮	⊥	Y	n	±
02	●	‡	"	2	B	R	b	r	é	Ů	ó	⋮	T	Φ	Θ	υ
03	♥	!!	#	3	C	S	c	s	â	ô	ú			X	ı	φ
04	♦	π	\$	4	D	T	d	t	ä	ö	À		-	W	x	χ
05	♣	S	%	5	E	U	e	u	à	Y	B	K	†	Ω	λ	Σ
06	♣	_	&	6	F	V	f	v	À	Ů	Γ	Λ	Π	α	μ	ψ
07	•	ı̇	'	7	G	W	g	w	ç	ù	Δ	M	P	β	ν	,
08	□	ı̇	(	8	H	X	h	x	ê	Ų	E	N	ℙ	γ	ξ	°
09	○	ı̇	)	9	I	Y	i	y	ë	Ö	Z	⋮	⋮	J	o	..
0A	■	→	*	:	J	Z	j	z	è	Ü	H	⋮	⋮	Γ	π	ω
0B	♂	←	+	;	K	[	k	{	ï	á	½	⋮	⋮	■	ρ	ü
0C	♀	⊥	,	<	L	\	l		ı̇	£	Θ	⋮	⋮	■	σ	û
0D	♂	↔	-	=	M	]	m	}	£	é	I	Σ	=	ó	ς	ω
0E	♂	▲	.	>	N	^	n	~	Ä	ı̇	«	O	⋮	ε	τ	■
0F	✱	▼	/	?	O	_	o	o	H	ı̇	»	ı̇	Σ	■	'	

## Eastern Europe (CP 852)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	É	á	⋮	Ł	đ	ó	-
01	@	◄	!	1	À	Q	a	q	ü	Í	í	⋮	Ł	Đ	ß	"
02	•	†	"	2	B	R	b	r	é	í	ó	⋮	Ł	Đ	ö	.
03	♥	!!	#	3	C	S	c	s	à	ô	ú		Ł	Đ	ñ	~
04	♦	¶	\$	4	D	T	d	t	ä	ö	À		-	ä	ñ	~
05	♣	§	%	5	E	U	e	u	û	Ł	á	À	†	Ñ	ñ	š
06	♠	_	&	6	F	V	f	v	č	Í	ž	À	À	í	š	÷
07	•	‡	'	7	G	W	g	w	ç	Š	ž	È	á	í	š	,
08	□	†	(	8	H	X	h	x	ı	š	Ę	š	Ł	ě	Ř	°
09	○	‡	)	9	I	Y	i	y	ë	Ö	ę	Ł	Ł	Ú	ú	..
0A	■	→	*	:	J	Z	j	z	ö	ü		Ł	Ł	Ł	Ł	.
0B	♂	←	+	;	K	[	k	{	ø	ť	z	Ł	Ł	Ł	Ł	Ł
0C	♀	Ł	,	<	L	\	l		ı	č	č	Ł	Ł	Ł	Ł	Ł
0D	♪	↔	-	=	M	]	m	}	ž	Ł	š	ž	=	Ł	ý	ř
0E	♂	▲	.	>	N	^	n	~	Ä	x	«	z	Ł	Ł	Ł	Ł
0F	✱	▼	/	?	O	_	o	Δ	Ć	č	»	Ł	Ł	Ł	Ł	Ł

## Turkish (CP 853)

00 0 ▶ 0 @ P ` p Ç É Á Ì Ó -  
01 © ◀ ! 1 Å Q a q ü è í Ì ß  
02 ● † " 2 B R b r é Ć ó ≡ T È Ò L  
03 ♥ !! # 3 C S c s a ô ú | † È Ò h  
04 ♦ ¶ \$ 4 D T d t ä ö ñ † - È Ğ ~  
05 † \$ % 5 E U e u à ò Ñ Á † ı ğ S  
06 † \_ & 6 F V f v e u Ğ Å Š í μ ÷  
07 • † ' 7 G W g w Ç ù ğ Å s İ H ,  
08 □ † ( 8 H X h x e İ Ğ Š Ì İ h °  
09 ° † ) 9 I Y i y è Ö Ğ ¶ ¶ † Ó ..  
0A ■ → \* : J Z j z e Ü ¶ ≡ ¶ Ó .  
0B ♂ † + ; K [ k { i ğ ½ ¶ ¶ ■ Ò  
0C ♀ L , < L \ 1 † İ £ J ¶ ¶ ■ Ò 3  
0D † ↔ - = M ] m } i Ğ § Ž = ü 2  
0E ♀ ▲ . > N ^ n ~ Å × « z ¶ † ■  
0F \* ▼ / ? O \_ o o Ć j » ] ¶ ■ ' .

## Cyrillic (CP 855)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	0	»		0	@	P	`	p	ђ	ъ	а	...	Л	л	Я -
01	@	◀	!	1	A	Q	a	q	Ъ	Ь	А	...	Л	Л	р	ы
02	•	†	"	2	B	R	b	r	ѓ	ъ	б	...	Т	т	Р	Ы
03	♥	!!	#	3	C	S	c	s	ѓ	Ъ	Б			М	с	э
04	♦	¶	\$	4	D	T	d	t	ё	ћ	ц		-	н	С	З
05	♣	S	%	5	E	U	e	u	Ё	Ѡ	Ц	x	†	Н	т	ш
06	♣	_	&	6	F	V	f	v	е	к	д	X	к	о	Т	■
07	•	†	'	7	G	W	g	w	Є	Ќ	Д	и	К	О	у	э
08	□	†	(	8	H	X	h	x	s	ѳ	е	И	ℓ	п	У	Э
09	○	↓	)	9	I	Y	i	y	S	Ÿ	Е			Ј	ж	ш
0A	■	→	*	:	J	Z	j	z	i	ц	ф			Г	Ж	■
0B	♂	←	+	;	K	[	k	{	I	Ц	Ф			■	в	ч
0C	♀	└	,	<	L	\	l		і	ю	г			■	В	Ч
0D	♪	↔	-	=	M	]	m	}	İ	Ю	Г	ђ	=	П	ь	
0E	♠	▲	.	>	N	^	n	~	j	ъ	«	Й		я	ь	■
0F	※	▼	/	?	O	_	o	△	J	Ъ	»		■	■	■	■

Turkish (CP 857)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	É	á	⋮	Ł	ø	Ó	-
01	©	◄	!	1	À	Q	a	q	ü	æ	í	⋮	ı	ä	ß	±
02	•	†	"	2	B	R	b	r	é	£	ó	⋮	Ť	Ê	Ô	
03	♥	!!	#	3	C	S	c	s	â	ô	ú		ı	Ë	Ò	¼
04	♦	π	\$	4	D	T	d	t	ä	ö	ñ		-	È	ø	π
05	♣	š	%	5	E	U	e	u	à	ò	ñ	Á	†		Ö	š
06	♠	_	&	6	F	V	f	v	ä	ü	Ç	Å	ä	í	μ	÷
07	•	ı	'	7	G	W	g	w	ç	ù	ğ	À	Å	İ		,
08	□	†	(	8	H	X	h	x	ê	î	ı	•	Ł	Ï	×	•
09	◊	↓	)	9	I	Y	i	y	ë	Ö	•	Ť	Ť	J	Ú	..
0A	■	→	*	:	J	Z	j	z	è	Ü	¬		Δ	Γ	Ù	•
0B	♂	←	+	;	K	[	k	{	ï	ø	¼		Ť	■	Ù	ı
0C	♀	Ł	,	<	L	\	l		î	é	¼	Ť	Ť	■	ı	š
0D	›	↔	-	=	M	]	m	}	ı	ø	ı	Ç	=	ı	ÿ	²
0E	ß	▲	.	>	N	^	n	~	Ä	Ş	«	¥	Ť	İ	-	■
0F	*	▼	/	?	O	_	o	◊	Å	ş	»	ı	■			'

## Euro PC Multilingual (CP 858)

	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
0		0	@	P	`	p	Ç	É	á	▒	Ł	đ	Ó	-
1	!	1	A	Q	a	q	ü	æ	í	▒	Ł	Đ	ß	±
2	"	2	B	R	b	r	é	Æ	ó	▒	Ł	Ě	Ö	-
3	#	3	C	S	c	s	â	ô	ú		Ł	Ě	Ò	¾
4	\$	4	D	T	d	t	ä	ö	ñ		-	È	õ	¶
5	%	5	E	U	e	u	à	ò	Ñ	Á	†	€	Õ	§
6	&	6	F	V	f	v	â	û	ä	Ä	ã	í	μ	÷
7	'	7	G	W	g	w	ç	ù	ó	À	Ã	î	þ	¸
8	(	8	H	X	h	x	ê	ý	ı	©	Ł	İ	Đ	°
9	)	9	I	Y	i	y	ë	ö	®	Ł	Ł	Ł	Ú	ˆ
A	*	:	J	Z	j	z	è	ü	ˆ	Ł	Ł	Ł	Û	˙
B	+	;	K	[	k	{	ı	ø	½	Ł	Ł	▒	Ü	¹
C	,	<	L	\	l		ı	£	¼	Ł	Ł	▒	Ý	³
D	-	=	M	]	m	}	ı	ø	ı	¢	=	:	Ÿ	²
E	.	>	N	^	n	~	Ä	×	«	¥	Ł	İ	-	•
F	/	?	O	_	o		Å	f	»	Ł	¤	▒		

## Portugal (CP 860)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	É	á	⋮	Ł	ł	α	≡
01	©	◄	!	1	À	Q	a	q	ü	À	í	⋮	⊥	⌈	ß	±
02	•	‡	"	2	B	R	b	r	é	È	ó	⋮	⌈	⌈	Γ	¿
03	♥	!!	#	3	C	S	c	s	à	ô	ú		⌈	⌈	π	≤
04	♦	¶	\$	4	D	T	d	t	ã	õ	ñ		-	Ł	Σ	ƒ
05	♣	§	%	5	E	U	e	u	à	ò	Ñ		†	†	σ	Ј
06	♠	-	&	6	F	V	f	v	Á	Ú	ä		†	¶	μ	+
07	•	‡	'	7	G	W	g	w	ç	ù	ø	¶			τ	≈
08	□	†	(	8	H	X	h	x	ê	î	¿	¶	Ł	†	φ	°
09	○	‡	)	9	I	Y	i	y	Ê	Ô	Ò		¶	Ј	θ	•
0A	■	→	*	:	J	Z	j	z	è	Ü	¬		Ł	¶	Ω	•
0B	♂	←	+	;	K	[	k	{	í	ç	½	¶	¶	■	ó	√
0C	♀	⊥	,	<	L	\	l		ô	£	¼			■	∞	n
0D	♂	↔	-	=	M	]	m	}	ì	Û	ı		=		ø	²
0E	♂	▲	.	>	N	^	n	~	Ã	Ê	«	Ј			ε	■
0F	※	▼	/	?	O	_	o	◊	Â	Ó	»	¶	±	■	∅	∅

Hebrew (CP 862)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V
02	W	X	Y	Z	a	b	c	d	e	f	g	h	i	j	k	l
03	m	n	o	p	q	r	s	t	u	v	w	x	y	z		
04																
05																
06																
07																
08																
09																
0A																
0B																
0C																
0D																
0E																
0F																

Tables

Canada/France (CP 863)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V
02	W	X	Y	Z	a	b	c	d	e	f	g	h	i	j	k	l
03	m	n	o	p	q	r	s	t	u	v	w	x	y	z	0	1
04	2	3	4	5	6	7	8	9	A	B	C	D	E	F	G	H
05	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X
06	Y	Z	a	b	c	d	e	f	g	h	i	j	k	l	m	n
07	o	p	q	r	s	t	u	v	w	x	y	z	0	1	2	3
08	4	5	6	7	8	9	A	B	C	D	E	F	G	H	I	J
09	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
0A	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p
0B	q	r	s	t	u	v	w	x	y	z	0	1	2	3	4	5
0C	6	7	8	9	A	B	C	D	E	F	G	H	I	J	K	L
0D	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	a	b
0E	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r
0F	s	t	u	v	w	x	y	z	0	1	2	3	4	5	6	7

## Arabic (CP 864)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V
02	W	X	Y	Z	a	b	c	d	e	f	g	h	i	j	k	l
03	m	n	o	p	q	r	s	t	u	v	w	x	y	z	AA	AB
04	AC	AD	AE	AF	AG	AH	AI	AJ	AK	AL	AM	AN	AO	AP	AQ	AR
05	AS	AT	AU	AV	AW	AX	AY	AZ	BA	BB	BC	BD	BE	BF	BG	BH
06	BI	BJ	BK	BL	BM	BN	BO	BP	BQ	BR	BS	BT	BU	BV	BW	BX
07	BY	BZ	CA	CB	CC	CD	CE	CF	CG	CH	CI	CJ	CK	CL	CM	CN
08	CO	CP	CQ	CR	CS	CT	CU	CV	CW	CX	CY	CZ	DA	DB	DC	DD
09	DE	DF	DG	DH	DI	DJ	DK	DL	DM	DN	DO	DP	DQ	DR	DS	DT
0A	DU	DV	DW	DX	DY	DA	DB	DC	DD	DE	DF	DG	DH	DI	DJ	DK
0B	DL	DM	DN	DO	DP	DQ	DR	DS	DT	DU	DV	DW	DX	DY	DA	DB
0C	DC	DD	DE	DF	DG	DH	DI	DJ	DK	DL	DM	DN	DO	DP	DQ	DR
0D	DS	DT	DU	DV	DW	DX	DY	DA	DB	DC	DD	DE	DF	DG	DH	DI
0E	DJ	DK	DL	DM	DN	DO	DP	DQ	DR	DS	DT	DU	DV	DW	DX	DY
0F	DA	DB	DC	DD	DE	DF	DG	DH	DI	DJ	DK	DL	DM	DN	DO	DP

Denmark/Norway (CP 865)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	É	Á	⋮	Ł	ł	α	≡
01	©	◄	!	1	Å	Q	a	q	ü	æ	í	⋮	ı	ı̇	ß	±
02	•	‡	"	2	B	R	b	r	é	Æ	ó	⋮	Ť	ť	Γ	≥
03	♥	!!	#	3	C	S	c	s	ä	ö	ú		ı	ı̇	π	≤
04	♦	¶	\$	4	D	T	d	t	ä	ö	ñ		—	Ł	Σ	ŕ
05	♣	§	%	5	E	U	e	u	à	ò	Ñ		†	ƒ	σ	Ј
06	♠	_	&	6	F	V	f	v	ä	ü	ä		ı	ı̇	μ	÷
07	•	ı	'	7	G	W	g	w	ç	ù	ø				τ	≈
08	□	†	(	8	H	X	h	x	ê	ÿ	ı	ı	ı̇	ı̇	°	
09	○	ı	)	9	I	Y	i	y	ë	Ö	ı			Ј	θ	•
0A	■	→	*	:	J	Z	j	z	ë	Ü	ı			ı	ø	•
0B	♂	←	+	;	K	[	k	{	ı	ø	ı̇	ı̇	ı̇	ı̇	ı̇	ı̇
0C	♀	└	,	<	L	\	l		ı	ı̇	ı̇			■	∞	n
0D	♪	↔	-	=	M	]	m	}	ı	ø	ı̇		=	ı̇	ı̇	ı̇
0E	♫	▲	.	>	N	^	n	~	Ä	Æ	«	ı̇		ı̇	ı̇	ı̇
0F	※	▼	/	?	O	_	o	◊	Å	ƒ	ı̇	ı̇	ı̇	ı̇	ı̇	ı̇

## Russian (CP 866)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
02	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
03	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
04	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
05	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
06	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
07	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
08	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
09	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0A	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0B	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0D	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0E	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0F	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F

Turkish 2 (CP 867)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p	Ç	É	á	⋮	Ł	o	Ó	-
01	©	◄	!	1	A	Q	a	q	ü	æ	í	⋮	Ł	ä	ß	±
02	•	†	"	2	B	R	b	r	é	Æ	ó	⋮	Ţ	Ê	Ô	
03	♥	!!	#	3	C	S	c	s	ä	ö	ú		Ţ	Ë	Ò	×
04	♦	¶	\$	4	D	T	d	t	ä	ö	ñ		-	È	ö	¶
05	♣	S	%	5	E	U	e	u	à	ò	Ñ	Á	†	Ö	S	
06	♣	_	&	6	F	V	f	v	ä	ü	Ğ	Ã	ä	í	µ	÷
07	•	ı	'	7	G	W	g	w	ç	û	ğ	À	Ã	İ		,
08	□	†	(	8	H	X	h	x	ê	ï	¿	©	Ł	İ	×	°
09	◊	ı	)	9	I	Y	i	y	ë	Ö	•	Ţ	Ţ	Ţ	Ú	..
0A	■	→	*	:	J	Z	j	z	è	Ü	¬		≡	Ţ	0	.
0B	♂	←	+	;	K	[	k	{	ï	ø	¼	Ţ	Ţ	■	Ù	ı
0C	♀	└	,	<	L	\	l		ı	£	¼	Ţ	Ţ	■	ı	³
0D	♪	↔	-	=	M	]	m	}	ı	ø	ı	¢	=	ı	Ÿ	²
0E	♫	▲	.	>	N	^	n	~	Ä	Ş	«	¥	Ţ	İ	-	■
0F	✱	▼	/	?	O	_	o	△	Å	ş	»	Ţ	¤	■	'	

OCR- A (CP 876)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00					0	a	P	r	p							
01			!	1	A	e	a	q								
02			"	2	B	R	b	r		Æ						
03			#	3	C	S	c	s								
04			¢	4	D	T	d	t								
05			£	5	E	U	e	u		Ñ						
06			&	6	F	V	f	v								
07			'	7	G	W	g	w		Š						
08	-	(	8	H	X	h	x									
09		)	9	I	Y	i	y		Ø							
0A		*	:	J	Z	j	z		Ù							
0B		+	;	K	£	k	£									
0C		,	<	L	\	l			£							
0D		-	=	M	£	m	}		¥							
0E		.	>	N	^	n	£	ˆ								
0F		/	†	O	Y	o	£	ˆ								

Tables

OCR- B (CP 877)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00				0	a	P	`	p								
01			!	1	A	Q	a	q	Ü	æ					ß	
02			"	2	B	R	b	r		Æ						
03			#	3	C	S	c	s								
04			\$	4	D	T	d	t	ä	ö						
05			%	5	E	U	e	u		ñ					š	
06			&	6	F	V	f	v	ä	š						
07			'	7	G	W	g	w		ø					.	
08	-	(		8	H	X	h	x								
09		)	9	I	Y	i	y		ö	_	U				"	
0A		*	:	J	Z	j	z		ü		W					
0B		+	;	K	Ç	k	ç		^							
0C		,	<	L	\	l	l		£							
0D		-	=	Ñ	ı	ñ	ı		¥							
0E		.	>	N	^	n	~		Ä							
0F		/	?	O	_	o	■		Å			¤			'	

# C. Interfaces

This appendix provides technical information for the parallel and serial interfaces.

**The Parallel Interface.....****C.2**

Signals Description..... C.2

Operating Phases..... C.3

Parallel Interface Signals..... C.4

Parallel Interface Signals Behaviour ..... C.7

Interface Timing ..... C.11

Mode Centronics..... C.11

Mode IEEE 1284 ..... C.11

**The Serial Interface.....****C.12**

Serial Interface Signals ..... C.13

## The Parallel Interface

The parallel interface of this printer fully supports the Centronics protocol plus the specific features requested by the EPSON and IBM printer connection in monodirectional mode and the Compatibility and Nibbles modes in bidirectional mode, plus the negotiation phases and the device identifier (as IEEE P1284).

The parallel interface is available on a specific 36 contact connector type AMPHENOL 57-40360-12-D56 or equivalent connector for 1284 Type B.

- **Drive Capability**  
Up to 15 feet (5 m) on AWG26 min. wire size of twisted conductors on TTL receiver. The max. reachable distance is conditioned by the host drive capability and by the noise level along the interface cable path.
- **Printer Connector Type**  
36 pins, 1284 Type B
- **Cable Connector**  
25 pin, 1284 A Type

## Signals Description

According to the IEEE - P1284 Standard, the pins assume different meanings and are identified by different names depending on the actual handshaking mode as follows:

- **Compatibility mode (Centronics)**

This is the lower level mode provides an asynchronous, byte-wide forward (host-to-peripheral) channel with data and status lines used according to their original definitions. The interfaces power up in the compatibility Mode Idle phase.

- **Nibble Mode**

This mode provides an asynchronous, reverse (peripheral-to-host) channel, under control of the host. In this mode, peripheral device to host data bytes are sent as two sequential, four-bit nibbles using the four peripheral-to-host status lines. These two modes cannot be active simultaneously.

- **Byte Mode**

This mode provides an asynchronous, byte-wide reverse (peripheral-to host) channel based on eight data lines of the interface for data and the control/status lines for handshaking. Byte mode is under host control and it cannot be simultaneously active with compatibility mode.

## **Operating Phases**

The link protocol is mainly based on the following three phases:

- **Negotiation Phase**

This phase is activated always by the host, only when in compatibility mode, and defines:

- whether a bidirectional link protocol can be established.
- the handshaking mode as well as the communications mode to be used.
- the device identification, if supported.

- **Communication Phase**

This phase is based on well defined handshaking rules which depend upon the selected link mode.

- **Termination Phase**

This phase is initiated by the host and returns the interface to the compatibility mode.

## Parallel Interface Signals

Description of the signals in monodirectional link:

Signal Name	Pin N°	Source	Description
STROBE	1	HOST	Clock signal which controls data transmission with its falling edge.
ACK	10	PRINTER	Negative pulsed signal indicating that the printer has received data and is ready to accept the next set of data. Also sent when the printer is switched from off-line to on-line and at the end of the initialization time. The BUSY line is always active.
DATA BIT 1 DATA BIT 2 DATA BIT 3 DATA BIT 4 DATA BIT 5 DATA BIT 6 DATA BIT 7 DATA BIT 8	2 3 4 5 6 7 8 9	PRINTER / HOST	Data 8 is the most significant bit. These are the data lines used by host or printer to transfer control code or ASCII codes.
BUSY	11	PRINTER	When high, this signal indicates that the printer cannot accept data or control codes. This signal goes high during data processing, in test and program modes, during initialization, when the buffer is full, and when a paper jam, paper end or paper size error occurs, in case of a power-on reset, the reception of a STROBE signal, while the register was not yet read, or when the INIT line is still active.
PE	12	PRINTER	When high, this signal indicates that the automatic input bin is out of paper and paper cannot be loaded from an other bin.
SELECT	13	PRINTER	When high, this signal indicates that the printer is on-line. It is put to low state in case of initialization or test and program mode. In IBM Proprinter emulation in low condition this signal signals a off-line request from the operator panel, paper jam, paper end or paper size errors.

Signal Name	Pin N°	Source	Description
AUTOFEEDXT	14	HOST	Active low level signal. Indicates whether a LF is performed after a CR or not.
GND	16	-	Logical ground level (0V).
CHASSIS GND	17	-	Frame ground.
+ 5 VDC	18	PRINTER	Is the DC voltage supplied by a component that limits the driven capability up to 100 mA.
SIGNAL GND	19-30	-	Signal ground.
INIT	31	HOST	Active low level signal. Indicates, that the printer is initializing. The BUSY signal is forced high.
ERROR	32	PRINTER	When low, this signal indicates that the printer is off-line, there is an off-line request from the operator panel, or the printer is in an error state because of: paper jam, paper end or paper size error, engine error, output bin full or cover open condition.
+5V	35	PRINTER	Pulled up to signal.
SELECTIN	36	HOST	Active low level signal. Enables the printer.



The pins 1 to 14 of the printer are connected to the pins with the same number of the parallel port of the host.

The pins 19 to 30 of the printer are connected to the pins 18 to 25 of the parallel port of the host.

The pins 31, 32 and 36 of the printer are connected respectively to the pins 16, 15 and 17 of the parallel port of the host.



1284 Mode signal names are shown with their Compatibility mode (Centronics) names in parenthesis ( ) for the bidirectional link.

Signal Name	Pin N° for Signal Wire	Pin N° for Return Wire	Source
HostClk (nStrobe)	1	19	HOST
AD1 (Data 1)	2	20	HOST in Compatibility mode and negotiation phase. NOT USED in Nibble mode.
AD2 (Data 2)	3	21	
AD3 (Data 3)	4	22	
AD4 (Data 4)	5	23	
AD5 (Data 5)	6	24	BIDIRECTIONAL in Byte mode.
AD6 (Data 6)	7	25	
AD7 (Data 7)	8	26	
AD8 (Data 8)	9	27	
PrtClk (nAck)	10	28	PRINTER
PrtBusy (Busy)	11	29	PRINTER
AckDataReq (PError)	12	28	PRINTER
Xflag (Select)	13	28	PRINTER
HostBusy (nAutofd)	14	30	HOST
Peripheral Logic High (+ 5V)	18		PRINTER
n.a. (nInit)	31	30	HOST
nDataAvail (NFault)	32	29	PRINTER
1284 Active (NSelectIn)	36	30	
Common Logic Ground	16 and Return Wires		
Chassis Ground	17		

## Parallel Interface Signals Behaviour

### HostClk / nWrite (nStrobe)

Compatibility Mode:	Set Active low to transfer data into printer input latch. Data is valid while nStrobe is low.
Negotiation Phase:	Set active low to transfer extendibility request value into printer input latch. Data is valid on the falling edge of HostClk.
Reverse Data Transfer Phase:	Set high during Nibble Mode transfer to avoid latching data into printer. Pulsed low during Byte Mode transfers to acknowledge transfer of data from the printer. The printer shall ensure that this pulse does not transfer a new data into the printer input latch.

### AD1...AD8 (Data 1...Data 8)

	Compatibility Mode:	Forward channel data.	
	Negotiation Phase:	Extendibility request value.	
	Reverse Data Transfer Phase:	Nibble Mode:	NOT USED.
		Byte Mode:	Reverse channel data.

### PrtClk (nAck)

Compatibility Mode:	Pulsed low by the printer to acknowledge the transfer of a data from the host.
Negotiation Phase:	Set low to acknowledge 1284 support, then set high to indicate that the Xflag (Select) and data available flags may be read.
Reverse Data Transfer Phase:	Used in both Nibble and Byte Modes to qualify data being sent to the host.

### PrtBusy (Busy)

	Compatibility Mode:	Driven high to indicate that the printer is not ready to receive data.	
	Negotiation Phase:	Reflects the present state of the printer's forward channel.	
	Reverse Data Transfer Phase:	Nibble Mode:	Data bits 3 then 7, then forward channel busy status
		Byte Mode:	Forward channel busy status.
	Reverse Idle phase:	Forward channel busy status.	

**AckDataReq (PError)**

Compatibility Mode:	Driven high to indicate that the printer has encountered an error in the paper path. The printer shall set nFault low whenever it sets PError high.	
Negotiation Phase:	Set high to indicate 1284 support, then follows nDataAvail (nFault).	
Reverse Data Transfer Phase:	Nibble Mode:	Data bits then 6.
	Byte Mode:	same as nDataAvail (nFault)
Reverse Idle Phase:	Set high until host requests data transfer, then follows nDataAvail (nFault).	

**Xflag (Select)**

Compatibility Mode:	Set high to indicate that the printer is on-line.	
Negotiation Phase:	The Xflag refers to extendibility flag. Used by the printer to reply to the requested extendibility byte sent by the host during the negotiation phase. The signal level is low for Nibble Mode, high for Byte Mode.	
Reverse Data Transfer Phase:	Nibble Mode:	Data bits 1 then 5.
	Byte Mode:	Same as negotiation phase.
Reverse Idle Phase:	Same as negotiation phase.	

**HostBusy (nAutofd)**

Compatibility Mode:	Set low by host to put the printer into auto-line feed mode.	
Negotiation Phase:	Set low in conjunction with 1284 Active (NSelectIn) being set high to request a 1284 mode. Then set high after printer sets PtrClk (nAck) low.	
Reverse Data Transfer Phase:	Nibble Mode:	Set low to indicate that host can receive printer-to-host data then set high to acknowledge receipts of that nibble.
	Byte Mode:	Same as Nibble Mode to request and acknowledge bytes. Following a reverse channel transfer the interface transitions to idle phase when HostBusy (nAutoFd) is set low and printer's no data available.

<b>HostBusy (nAutofd) (cont.)</b>		
	Reverse Idle Phase:	Set high in response to PtrClk (nAck) low pulse to re-enter reverse data transfer phase. Is set high with 1284 Active (nSelectIn) being set low, the 1284 idle phase is being aborted and the interface returns to Compatibility Mode.

<b>Peripheral Logic High (+ 5V)</b>		
	Set high to indicate that all other signals sourced by the printer are in valid state. Set low to indicate the printer is off.	

<b>n.a. (nInit)</b>		
	Compatibility Mode:	Pulsed low in conjunction with 1284 Active low to reset the interface and force to return to Compatibility Mode idle phase.
	Negotiation Phase:	Set HIGH.
	Reverse Data Transfer Phase:	Set HIGH.

 
<b>nDataAvail (NFault)</b>			
	Compatibility Mode:	Set low to indicate that an internal printer error has occurred.	
	Negotiation Phase:	Set high to acknowledge 1284 compatibility. In Nibble or Byte Mode it is then set low to indicate printer-to-host data is available following host setting HostBusy (nAutoFd) high.	
	Reverse Data Transfer Phase:	Nibble Mode:	Set low to indicate that printer is ready to send to host. Then used to send data bits 0 then 4.
		Byte Mode:	Used to indicate that data is available.
	Reverse Idle Phase:	Used to indicate that data is available.	

<b>1284 Active (NSelectIn)</b>		
	Compatibility Mode:	Set low by host to select printer.
	Negotiation Phase:	Set high in conjunction with Host Busy being set low to request a 1284 mode.
	Reverse Data Transfer Phase:	Set high to indicate that bus direction is printer to host. Set low to terminate 1284 mode and set bus direction host to printer.
	Reverse Idle Phase:	Same as Reverse Data Transfer phase.

## Interface Timing

Timing and Handshaking depend upon the connection mode.


### Mode Centronics

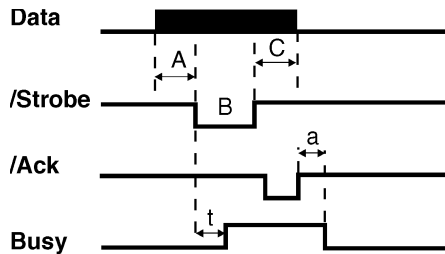

Our Centronics mode supports the BUSY-WHILE-STROBE busy signal timing and ACK-IN-BUSY as BUSY-ACK relationship.

Legend	Time interval	Min.	Max.	all times in $\mu\text{s}$
A	Data Setup Time	1.0		
B	Strobe pulse width	1.0	500	
C	Data hold time	1.0		
t	Busy while Strobe	0.25	1.0	
a	Ack in Busy	0	2.5	

### Mode IEEE 1284

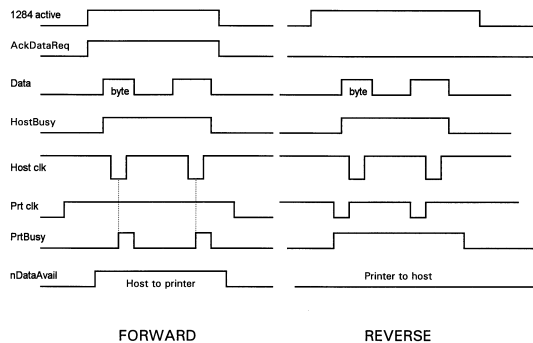 

## The Serial Interface

This printer provides the RS-232/C and RS-422/A serial interfaces. The interface mode is selected via menu.

- **Transmission Type**

Data is sent and received in start/stop (asynchronous) transmission.

- **Character Format**

Each character is transmitted in the following format:

1 START BIT + 8 DATA BITS + 1 PARITY BIT + 1 STOP BIT

The least significant bit of the data bits is sent first after the start bit. The number of data bits is selected via menu. The parity bit, when present, follows the data bits. The start bit is a logical "0" and the stop bit is a logical "1". The start and stop bits are used as character framing bits.

- **Printer Connector**

Male DB25 or equivalent connector.

- **Drive Capability**

max. 50 feet (15 m) for all supported data rates. The RS-422/A interface is effective up to 1200 m.

## Serial Interface Signals

The following table lists the RS-232/C serial interface signals:

Signal Name	Pin Number	Local Connect. Source	Remote Connect. Source	ISO/CC ITT Circuit	RS-232/C Circuit	Description
FRAME GROUND	1	-	-	101	AA	This printer is shipped with pin 1 connected to the frame ground (protective ground).
TXD	2	Printer	Printer	103	BA	Transmitted Data Signal (an output from printer). A MARK condition is held during IDLE communication state. An indeterminate state is present when printer is powered off.
RXD	3	Host	Data Set	104	BB	Received data signal (an input to printer)
RTS	4	Printer	Printer	105	CA	Request to Send Signal (an output from printer). Active HIGH level signal. It is HIGH until the printer is powered off, then an indeterminate state is present.
CTS	5		Data Set	106	CB	Active HIGH level signal indicates that the host or data set is ready to receive data from the printer..
DSR	6		Data Set	107	CC	Active HIGH level signal. Indicates that the host or data set is ready to be connected to the printer and is ready for data transfer.

Signal Name	Pin Number	Local Connect. Source	Remote Connect. Source	ISO/CC ITT Circuit	RS-232/C Circuit	Description
DCD	8		Data Set	109	CF	Active HIGH level signal. Indicates that the host is transmitting or the data set is receiving the Data Carrier signal..
2 <sup>nd</sup> RTS	11	Printer		120	SCA	Functionally equivalent to the DTR signal.
DTR	20	Printer	Printer	108	CD	Data Terminal Ready. Normally HIGH (ON). Indicates that the printer is ready to initiate a connection.

The following table lists the RS-422/A serial interface signals::

ISO Circuit ID	Signal Source	Pin Number	Description
T (A)	Printer	13	Transmit. MARK signal is present when printer is not sending data.
T (B)		14	Transmit Return.
R (A)	Host	16	Receive. A MARK level is expected when sender is in idle state.
R (B)		19	Receive Return.
G		7	Signal Ground. Always connected to the 0 Volt of the power supply.
SHIELD		1	Cable Shield. Optionally connected to the frame ground of the printer via a suitable jumper.

# GOST (Russian)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
02	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
03	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
04	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
05	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
06	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
07	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
08	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
09	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0A	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0B	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0D	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0E	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0F	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F

## TASS (Cyrillic)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
01	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
02	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
03	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
04	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
05	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
06	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
07	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
08	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
09	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0A	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0B	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0C	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0D	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0E	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0F	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

# ISO 8859/1 (Latin 1)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
01	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
02	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
03	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
04	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
05	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
06	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
07	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
08	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
09	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0A	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0B	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0D	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0E	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0F	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F

## ISO 8859/2 (Latin 2)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p			°	Ř	Đ	ř	đ	
01	©	◄	!	1	À	Q	a	q			Ā	ā	Á	Ń	á	ń
02	•	†	"	2	B	R	b	r			˘	˙	Â	Ň	a	ň
03	♥	!!	#	3	C	S	c	s			Ł	ł	Ǻ	Ó	ǻ	ó
04	♦	¶	\$	4	D	T	d	t			¤	ˆ	Ä	Ô	ä	ô
05	♣	§	%	5	E	U	e	u			Ĺ	ĺ	Í	Ö	í	ö
06	♠	_	&	6	F	V	f	v			Š	š	Č	Ö	č	ö
07	•	‡	'	7	G	W	g	w			Š	˘	Ç	×	ç	÷
08	□	†	(	8	H	X	h	x			˝	˙	Č	Ř	č	ř
09	◊	↓	)	9	I	Y	i	y			Š	š	É	Ů	é	ů
0A	■	→	*	:	J	Z	j	z			Ş	ş	Ę	Ú	ę	ú
0B	♂	←	+	;	K	[	k	{			ť	č	Ě	Ů	ě	ů
0C	♀	⊥	,	<	L	\	l				Ž	ž	Ě	Ü	ž	ü
0D	♪	↔	-	=	M	]	m	}			-	˝	í	ý	ı	ÿ
0E	♫	▲	.	>	N	^	n	~			Ž	ž	İ	ı	ı	ı
0F	*	▼	/	?	O	_	o	◊			Ž	ž	Đ	ß	đ	·

# ISO 8859/3 (Latin 3)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p			°	À		à		
01	©	◄	!	1	À	Q	a	q			ñ	ñ	Á	Ñ	á	ñ
02	•	†	"	2	B	R	b	r			˜	ˆ	Ã	Ô	ã	ô
03	♥	!!	#	3	C	S	c	s			£	³		Ó		ó
04	♦	¶	\$	4	D	T	d	t			¤	´	Ä	Ö	ä	ö
05	♣	§	%	5	E	U	e	u			μ	ˆ	Ç	Ê	ç	ê
06	♠	_	&	6	F	V	f	v			ß	ñ	È	Ö	è	ö
07	•	‡	'	7	G	W	g	w			§	•	Ç	×	ç	÷
08	◻	†	(	8	H	X	h	x			¨	,	È	Ç	è	ç
09	◊	‡	)	9	I	Y	i	y			ı	ı	É	Ù	é	ù
0A	◼	→	*	:	J	Z	j	z			§	§	Ê	Ú	ê	ú
0B	♂	←	+	;	K	[	k	{			Ç	ç	Ë	Û	ë	ü
0C	♀	⌞	,	<	L	\	l				Œ	Ÿ	İ	Ü	ı	ü
0D	♂	↔	-	=	M	]	m	}			-	½	İ	Ü	ı	ü
0E	♂	▲	.	>	N	^	n	~					İ	Ş	ı	ş
0F	※	▼	/	?	O	_	o	◊			Ž	ž	İ	ß	ı	˙

## ISO 8859/4 (Latin 4)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p			°	Å	Đ	ā	đ	
01	©	◄	!	1	À	Q	a	q			Ā	ą	Á	Ń	á	ņ
02	•	†	"	2	B	R	b	r			κ	˙	Â	Õ	ā	õ
03	♥	!!	#	3	C	S	c	s			Ĥ	ŗ	Ă	Ŕ	ă	ŕ
04	♦	¥	\$	4	D	T	d	t			κ	˙	Ä	Ö	ä	ö
05	♣	§	%	5	E	U	e	u			İ	ı	Ė	Ų	ė	ų
06	♠	_	&	6	F	V	f	v			Ł	ł	Æ	Ö	æ	ö
07	•	‡	'	7	G	W	g	w			Š	˘	Į	×	į	÷
08	□	†	(	8	H	X	h	x			ˆ	˙	Č	Ø	č	ø
09	◊	‡	)	9	I	Y	i	y			Š	š	É	Ų	é	ų
0A	■	→	*	:	J	Z	j	z			Ě	ě	Ę	Ú	ę	ú
0B	♂	←	+	;	K	[	k	{			Ġ	ġ	Ë	Ů	ë	ů
0C	♀	⌊	,	<	L	\	l	!			Ť	ť	Ê	Ü	ě	ü
0D	›	↔	-	=	M	]	m	}			-	Đ	Í	Ů	í	ů
0E	♂	▲	.	>	N	^	n	~			Ž	ž	İ	Ů	ı	ů
0F	*	▼	/	?	O	_	o	◊			-	ŋ	İ	ß	ı	˙

# ISO 8859/5 (Latin/Cyrillic)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p				А	Р	а	р	№
01	©	◄	!	1	А	Q	a	q				Ё	Б	С	б	с
02	®	‡	"	2	В	R	b	r				Ъ	В	Т	в	т
03	♥	!!	#	3	С	S	c	s				Ѓ	Г	У	г	у
04	♦	Π	\$	4	D	T	d	t				Є	Д	Ф	д	ф
05	♣	\$	%	5	E	U	e	u				Ѕ	Е	Х	е	х
06	♣	_	&	6	F	V	f	v				І	Ж	Ц	ж	ц
07	•	‡	'	7	G	W	g	w				Ї	З	Ч	з	ч
08	□	†	(	8	H	X	h	x				Ј	И	Ш	и	ш
09	◊	‡	)	9	I	Y	i	y				Љ	Й	Щ	й	щ
0A	■	→	*	:	J	Z	j	z				Ђ	К	Ъ	к	ъ
0B	♂	←	+	;	K	[	k	{				Ћ	Л	Ы	л	ы
0C	♀	└	,	<	L	\	l					Ќ	М	Ь	м	ь
0D	♪	↔	-	=	M	]	m	}				–	Н	Э	н	э
0E	♠	▲	.	>	N	^	n	~				Ў	О	Ю	о	ю
0F	*	▼	/	?	O	_	o	◊				Ц	П	Я	п	я

# ISO 8859/6 (Latin/Arabic)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p						ن	ـ	ر
01	©	◄	!	1	A	Q	a	q						ء	و	م
02	●	‡	"	2	B	R	b	r						آ	ن	ق
03	♥	!!	#	3	C	S	c	s						هـ	ي	ك
04	♦	¶	\$	4	D	T	d	t						ج	ش	ل
05	♣	§	%	5	E	U	e	u						أ	ص	م
06	♠	_	&	6	F	V	f	v						د	ض	ن
07	•	‡	'	7	G	W	g	w						ا	ط	ب
08	◻	†	(	8	H	X	h	x						ب	ظ	و
09	◊	‡	)	9	I	Y	i	y						ة	ع	ى
0A	■	→	*	:	J	Z	j	z						ت	ح	ي
0B	♂	←	+	;	K	[	k	{						!	ث	=
0C	♀	⌞	,	<	L	\	l							،	ج	”
0D	♪	↔	-	=	M	]	m	}						-	ج	=
0E	♫	▲	.	>	N	^	n	~						خ		”
0F	✱	▼	/	?	O	_	o	△						؟	د	'

## ISO 8859/7 (Latin/Greek)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		ó	@	P		p			°	ÿ	Π	Û	π	
01	©	◄	!	1	À	Q	a	q			`	±	À	P	α	ρ
02	®	†	"	2	B	R	b	r			´	²	B		β	ς
03	♥	!!	#	3	C	S	c	s			£	³	Γ	Σ	γ	σ
04	♦	¥	\$	4	D	T	d	t					Δ	T	δ	τ
05	♣	§	%	5	E	U	e	u					E	Υ	ε	υ
06	♠	_	&	6	F	V	f	v			!	À	Z	Φ	ζ	φ
07	•	¡	'	7	G	W	g	w			\$	•	H	X	η	χ
08	▣	‡	(	8	H	X	h	x			¨	Ξ	Θ	Ψ	θ	ψ
09	◊	↓	)	9	I	Y	i	y			©	Η	I	Ω	ι	ω
0A	■	→	*	:	J	Z	j	z					Ι	K	Ϊ	κ
0B	♂	←	+	;	K	[	k	{			α	»	Λ	Ϊ	λ	ü
0C	♀	⌊	,	<	L	\	l	!			¬	ϑ	M	ά	μ	ό
0D	♪	↔	-	=	M	]	m	}			-	½	N	έ	ν	ύ
0E	♫	▲	.	>	N	^	n	~					Τ	Ξ	ή	ξ
0F	※	▼	/	?	O	_	o	◊			-	ϑ	O	ι	ο	

## ISO 8859/8 (Latin/Hebrew)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p			°				א	נ
01	©	◄	!	1	À	Q	a	q			±				ב	ס
02	•	‡	"	2	B	R	b	r			¢	²			ג	ע
03	♥	!!	#	3	C	S	c	s			£	³			ד	ף
04	♦	¶	\$	4	D	T	d	t			¤	´			ה	פ
05	♣	§	%	5	E	U	e	u			¥	µ			ו	ץ
06	♠	–	&	6	F	V	f	v			¦	¶			ז	צ
07	•	‡	'	7	G	W	g	w			§	·			ח	ק
08	◻	†	(	8	H	X	h	x			¨	,			ט	ך
09	◊	‡	)	9	I	Y	i	y			©	¹			י	ש
0A	◼	→	*	:	J	Z	j	z			×	÷			ך	ת
0B	♂	←	+	;	K	[	k	{			«	»			כ	
0C	♀	⌊	,	<	L	\	l	!			¬	¼			ל	
0D	♪	↔	–	=	M	]	m	}			–	½			ם	
0E	♂	▲	.	>	N	^	n	~			•	¾			נ	
0F	✱	▼	/	?	O	_	o	Δ			–			=	ן	

# ISO 8859/9 (Latin 5)

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	ø	►		0	@	P	`	p			°	À	Ç	à	ç	
01	©	◄	!	1	À	Q	a	q			ı	±	Á	Ñ	á	ñ
02	•	†	"	2	B	R	b	r			¢	²	Â	Ò	â	ò
03	♥	!!	#	3	C	S	c	s			£	³	Ã	Ó	ã	ó
04	♦	¶	\$	4	D	T	d	t			¤	´	Ä	Ô	ä	ô
05	♣	§	%	5	E	U	e	u			¥	µ	Å	Ö	å	ö
06	♠	_	&	6	F	V	f	v			¦	¶	Æ	Ö	æ	ö
07	•	ı	'	7	G	W	g	w			§	·	Ç	×	ç	÷
08	□	†	(	8	H	X	h	x			"	,	È	Ø	è	ø
09	◊	ı	)	9	I	Y	i	y			©	ı	É	Û	é	û
0A	■	→	*	:	J	Z	j	z			ª	º	Ê	Ú	ê	ú
0B	♂	←	+	;	K	[	k	{			«	»	Ë	Û	ë	ü
0C	♀	⌊	,	<	L	\	l				¬	¼	İ	Ü	ı	ü
0D	›	↔	-	=	M	]	m	}			-	½	İ	İ	ı	ı
0E	♂	▲	.	>	N	^	n	~			•	¾	İ	Ş	ı	ş
0F	*	▼	/	?	O	_	o	◊			-	ı	İ	B	ı	ÿ

## ISO 8859/15 (Latin 9)

	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
0		0	@	P	`	p				°	À	É	à	á
1	!	1	A	Q	a	q			ı	±	Á	Ñ	á	ñ
2	"	2	B	R	b	r			ç	²	Â	Ò	â	ò
3	#	3	C	S	c	s			£	³	Ã	Ó	ã	ó
4	\$	4	D	T	d	t			€	Ž	Ä	Ô	ä	ô
5	%	5	E	U	e	u			¥	μ	Å	Ö	å	ö
6	&	6	F	V	f	v			Š	¶	Æ	Ø	æ	ø
7	'	7	G	W	g	w			§	•	Ç	×	ç	÷
8	(	8	H	X	h	x			š	ž	È	Ø	è	ø
9	)	9	I	Y	i	y			©	¹	É	Ù	é	ù
A	*	:	J	Z	j	z			ª	º	Ê	Ú	ê	ú
B	+	;	K	[	k	{			«	»	Ë	Û	ë	ü
C	,	<	L	\	l				¬	œ	Ì	Ü	ì	ü
D	-	=	M	]	m	}			-	œ	Í	Ý	í	ý
E	.	>	N	^	n	~			®	Ÿ	Î	Þ	î	þ
F	/	?	O	_	o				-	ı	Ï	ß	ï	ÿ

# Hexadecimal to Decimal Conversion Table

	00	10	20	30	40	50	60	70	80	90	A0	B0	C0	D0	E0	F0
00	0	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
01	1	17	33	49	65	81	97	113	129	145	161	177	193	209	225	241
02	2	18	34	50	66	82	98	114	130	146	162	178	194	210	226	242
03	3	19	35	51	67	83	99	115	131	147	163	179	195	211	227	243
04	4	20	36	52	68	84	100	116	132	148	164	180	196	212	228	244
05	5	21	37	53	69	85	101	117	133	149	165	181	197	213	229	245
06	6	22	38	54	70	86	102	118	134	150	166	182	198	214	230	246
07	7	23	39	55	71	87	103	119	135	151	167	183	199	215	231	247
08	8	24	40	56	72	88	104	120	136	152	168	184	200	216	232	248
09	9	25	41	57	73	89	105	121	137	153	169	185	201	217	233	249
0A	10	26	42	58	74	90	106	122	138	154	170	186	202	218	234	250
0B	11	27	43	59	75	91	107	123	139	155	171	187	203	219	235	251
0C	12	28	44	60	76	92	108	124	140	156	172	188	204	220	236	252
0D	13	29	45	61	77	93	109	125	141	157	173	189	205	221	237	253
0E	14	30	46	62	78	94	110	126	142	158	174	190	206	222	238	254
0F	15	31	47	63	79	95	111	127	143	159	175	191	207	223	239	255

Tables